


CKC

GOBO Projector 200

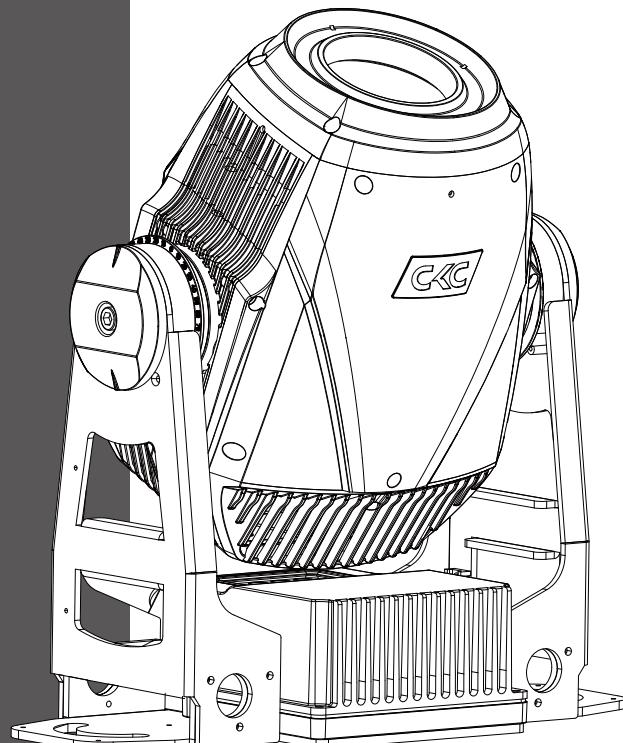

www.ckclighting.com

CKC LIGHTING CO.,LTD

Addr.:335 Nansha Avenue, Tung Chung Town,
Nansha District, Guangzhou City, China.
TEL: (020)3920 4506 FAX: (020)3920 4631
WEB: www.ckclighting.com



Before carrying out any installation, maintenance, or cleaning of the lighting fixtures, please confirm that the power has been cut off! Before using this fixture, please read this manual. Our company reserves the right to change product design and specifications without prior notice.

CONTENTS

1. Security Warning Information	1
2. Product Introduction	3
2.1 Exterior dimensions	3
2.2 Fixture packaging accessories	3
3. Main technical parameters of the equipment	3
4. Packaging and transportation	5
4.1 Disassemble packaging	5
4.2 Equipment installation	5
5. Installation Requirements Explanation	5
5.1 Clamp installation	5
5.2 Installation Diagram	6
6. Power and signal connection	7
6.1 Power and signal socket	7
6.2 Power Connect	7
6.3 Signal Connect	7
7. Control panel	8
7.1 Panel Introduction	8
7.2 System menu	9
8. DMX control channel table	10
9. Control circuit diagram	11
10. Regular maintenance	11
10.1 Cleaning and maintenance	11
10.2 Fault analysis and handling	12

★ Statement ★

- This manual contains important information on safe use and installation. Please read it carefully and follow the requirements for operation and installation. Please keep this manual properly;
- The equipment has good performance and complete packaging when it leaves the factory. The operator should strictly follow the warning items and operating instructions stated in the manual. Any malfunction or damage caused by misuse or neglect of the manual is not within the scope of our company's responsibility and warranty;
- The relevant information in this manual is for reference only. All lighting products are subject to the actual product. Any changes will not be notified separately, and our company reserves the right of final interpretation.

1. Security Warning Information



Attention !

Please read the safety requirements information in this section carefully before installing, powering on, operating, or repairing the lighting fixtures.



- This product is for professional use and is not suitable for other purposes;
- After receiving the lighting fixtures, please check if the packaging is complete and unpack to check if the equipment has been damaged due to transportation. If there is any damage caused by transportation, please do not use this lamp and contact local technicians or manufacturers as soon as possible;
- When transporting again, please use the original packaging materials;
- If there is obvious damage to the machine casing, it should be replaced in a timely manner;
- When hanging lamps, it is necessary to verify that the hanging equipment can withstand more than 6 times the weight of the lamp. After installation, it is necessary to verify that the lamp cover and installation buckle are secure and undamaged. At the same time, a safety rope should be used as an auxiliary safety for the lamp and fixed on the truss;
- The light source inside this luminaire should be replaced by the manufacturer, its service agent, or a similarly qualified person;
- If you have any other questions about how to safely operate the equipment, please contact our technical personnel or call our service hotline;
- This product has a protection level of IP65 and can be used both indoors and outdoors;
- Avoid direct external strong light shining on the lens, which may cause the lens to focus and burn out internal components.



- Lighting fixtures should be kept clean and avoid prolonged use in overheated or dusty environments to prevent contact with chemical liquids;
- When using the product, attention should be paid to avoiding serious or fatal injuries caused by fire, heat, electrical shock, and ultraviolet radiation. Before powering on or installing, read the instruction manual first. Follow the safety precautions for operation and pay attention to the warning signs on the instructions and equipment;
- Only professionals are allowed to install, operate, and maintain lighting fixtures, and strictly follow the procedures stated in the operating instructions.



- The eyes cannot directly look at the luminous object;
- Do not connect this device to any dimmer;
- If visible damage occurs to the protective casing, lens, and display screen on the lighting fixture, it is considered as damage to the point of loss;
- Please do not place any filters or other items at the light outlet, and do not replace non original parts;
- The minimum safe illumination distance of the lamp is 1m.



- Before installation, please confirm that the power supply voltage used matches the voltage indicated on the light fixture. Each lighting fixture should be properly grounded and electrically installed according to relevant standards;
- Please disconnect the power before repairing or cleaning the equipment;
- During the operation of the lighting fixtures, touching the wires is prohibited to prevent electric shock;
- If the external soft cable or wire of this lamp is damaged, the wire should be replaced by the manufacturer, its agent, or a similarly qualified person to avoid danger;
- Avoid flammable liquids, water, or metal conductors from entering the interior of the lamp to prevent electric shock or fire. If any foreign objects enter the lamp, immediately cut off the power supply;
- When multiple lamps are operated in series, the signal lines can be connected in multiple ways, but the power supply must be connected separately.





- The lighting fixtures work normally at -20 °C to 45 °C . When replacing any components or accessories in the equipment, ensure that the power is disconnected to prevent electric shock and injury;
- The maximum surface temperature of the lamp during operation can reach 60 °C , please do not touch it with bare hands.



- The lighting fixtures must be installed in a sufficiently ventilated area, at least 0.5m away from adjacent surfaces, to ensure that no ventilation holes are blocked;
- Do not install the lighting fixtures directly on flammable objects;
- The minimum distance between all outer surfaces of the lamp and combustible materials is 0.5m.


2. Product Introduction

2.1 Exterior dimensions of lighting fixtures

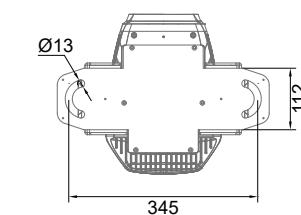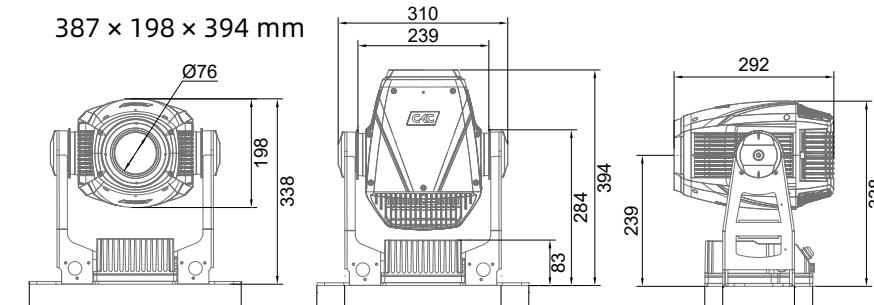

2.2 Packaging accessories

Name	QTY
Safety cable	1 PCS

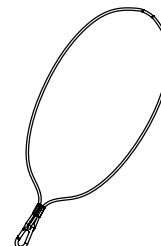

3. Main technical parameters of the equipment

Product execution standards: GB7000.1-2023, GB7000.217-2023, Q/YF-2017

● Electrical parameter

Rated input voltage: AC 100V-240V~ 50Hz/60Hz

Rated power of the entire fixture: 282 W

Power factor: 0.99F

Input Current: 1.55A 220V


● Source lifespan

>20000 hours

● Tilt

Horizontal fixed angle, can't be adjust

Vertical adjustable angle, adjustable angle range $\pm 120^\circ$

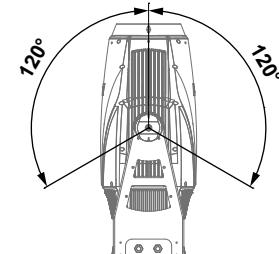

● Optical system

Source: 200W CW LED

Beam angel: 11 ~ 22°

Output luminous flux: 7600 Lm

CCT: 20000 K

● Control and programming

Control channel: 12 CH

Protocol: DMX512, RDM

Data connect: 3 pin signal in/out


● Gobo system

Rotation gobo: 6+1


Gobo outer diameter: $23^{+0}_{-0.2}$ mm

Internal diameter: 19mm



Thickness: 1.2mm

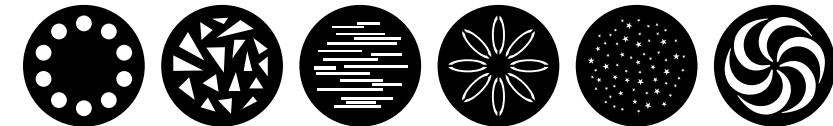

Gobo replace

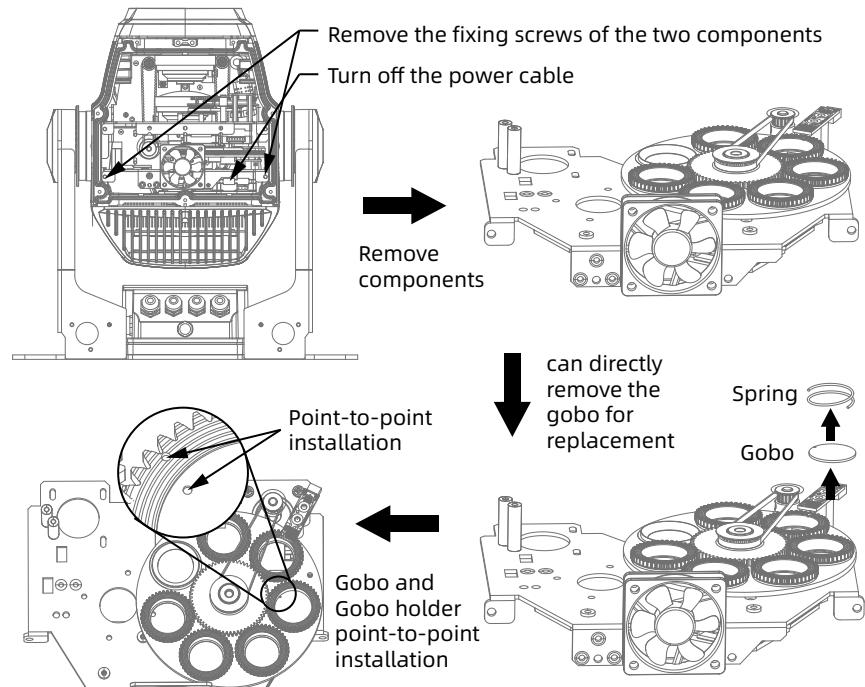

● Illumination draw

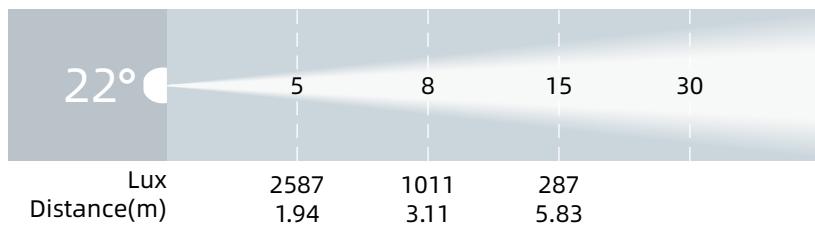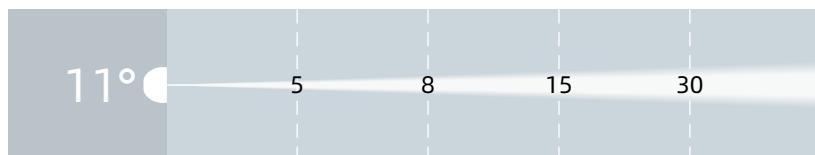

● Other effect function

Fast electronic strobe: 1~25Hz

● Other features and functions

Weight: 12 KG

4. Packaging and transportation

4.1 Disassemble packaging

! Notice: After receiving the fixture, please unpack and check for any damage caused by transportation. If there is any damage caused by transportation, please do not use this fixture and contact the local technical personnel or manufacturer as soon as possible.

4.2 Equipment packaging

Disconnect the power supply before packaging the lighting fixtures to allow them to cool completely.

5. Installation Requirements Explanation

5.1 Clamp install

1. After the bottom plate of the fixtures is tightly attached to the truss, use M12 bolts to pass through the installation holes on the bottom plate, and lock the other end with M12 nuts.



2. After fixing the fixture on the truss, one safety cable must be added and connected to the circular hole of the fixture arm.



Waining !

The lighting fixture must be fixed with 2 M12 screws, and an additional safety rope must be connected to the safety rope holes on the left and right support plates of the arm. Be careful not to connect it to the handling handle.



5.2 Installation Diagram

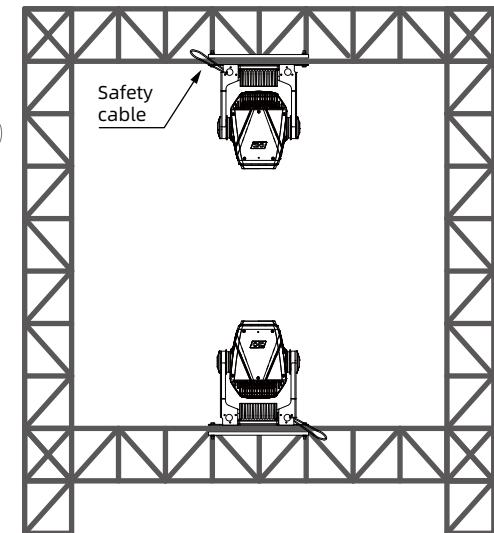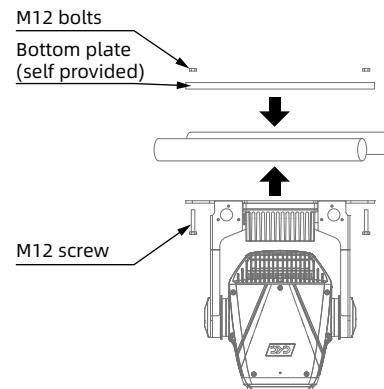

Reminder: External beam source may damage internal lighting fixtures

External beams from direct sunlight, lighting fixtures, and lasers that are directly focused onto the casing or penetrate the lens to illuminate the interior of the fixture may cause damage to the components. This is a common issue with all lighting fixtures and does not occur alone with CKC products. Although there is no way to completely prevent this problem from occurring, following the following guidelines can prevent potential damage.


When unpacking, installing, using, and stopping the operation of the lighting fixtures, please do not expose the transparency of the fixtures the mirror is exposed to direct sunlight, other lighting fixtures, or laser beams,Do not directly focus the beam of this device onto another lighting fixture.

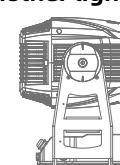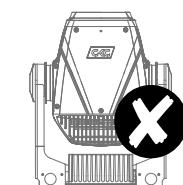


6. Power、Signal connect

6.1 Power and signal socket

- 1、Power Input
- 2、DMX Input
- 3、DMX Output
- 4、Power Output

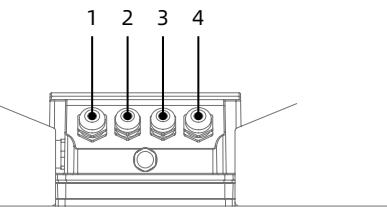

6.2 Power connect

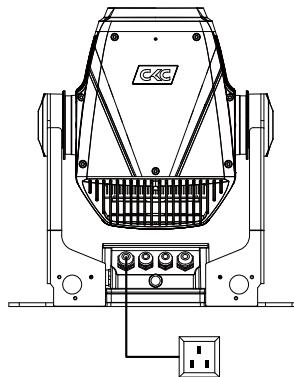

Power In

Connection method:

L(live wire) - brown wire

E(Ground wire) - yellow/green dual color line

N(Zero Line) - Blue Line

When connecting the power supply, please note that the voltage and frequency of the power supply must match the voltage and frequency marked on the light fixture. When multiple fixtures are used simultaneously, it is recommended to connect the power supply of each fixture separately, so that each fixture can be individually controlled for power on/off.



Attention: When connecting the power supply, the ground wire (yellow/green dual color wire) must be safely grounded and comply with all relevant electrical installation standards.

This product uses Powercon In/Out to connect power cords. Due to power limitations, a 2-square 220V power cord can carry up to 1 products.


Warning !

- Do not connect too many fixtures or overload a single power cord;
- Do not use power cords with damaged insulation layers, and do not place power cords on other wires;
- When the fixture is not in use or cleaned, please unplug the power cord; Do not forcefully unplug or drag the power cord directly.


6.3 Signal connect



The lighting fixtures are equipped with standard DMX XLR input and output sockets. Please use DMX512 shielded twisted pair signal cables or Category 5 or above network twisted pair cables for connection. The typical connection distance for DMX signal lines is 150 meters. When transmitting signals over long distances, a DMX512 signal amplifier must be added.

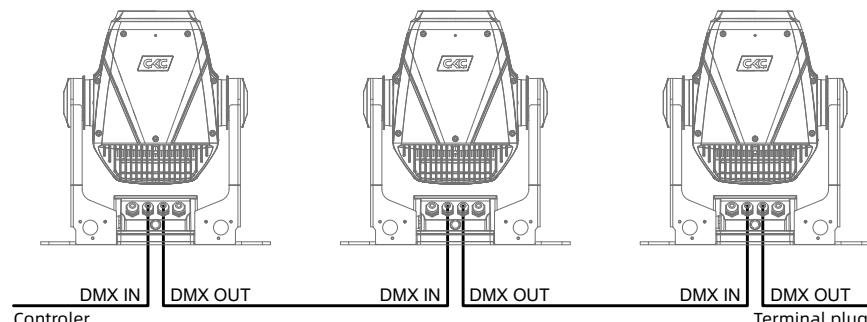


Connect a shielded twisted pair signal cable from the DMX output port of the controller to the DMX input port of the first device, and from the DMX output port of the first device to the DMX input port of the second device, and so on, until all the lamps are connected. Then install a terminal plug on the last 3/5 pin socket of each connected lamp output. (Weld a 4/1W, 120 Ω resistor between the 2 and 3 pins of a 3 or 5 core pin XLR plug).

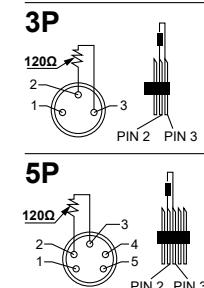

7. Control panel

7.1 Panel Introduction

- Adopting a LCD display screen;
- Press the MODE key to view or modify the lighting function settings, and press the UP, DOWN keys to select the function menu;
- Press the ENTER key to confirm your selected function menu, which will take you to the corresponding sub menu in the menu. Each menu item represents a specific function of the lighting fixture (as shown in the table below);
- Press the ENTER key to save your modifications or enter a submenu, and press the UP or DOWN key to modify values (increase or decrease values); Press the MODE key to return to the previous menu or exit.
- Press the MODE key to return to the previous menu or exit.

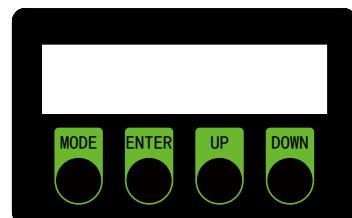

7.2. System menu

Note: The gray color block is the default setting value


Software Update Please Wait... CKC Gobo Projector 200								
CH:Simple 12CH ADDRESS:001								
DMX settings	ADDRESS	A001~AXXX						
Function	Dim Mode	Standard Stage TV Architectural Theatre						
	Fan Set	Head Fan	Auto High Low					
	LCD.Set	Backlight Key Lock DispFlash	01~60m OFF/ON OFF/ON					
	Factory Restore	OFF/ON						
	Reset Motors	All						
	Calibrate	-Password 050- GOBO :						
	Manual control	DIMMER =XXX :						
Info	Time.Info	Power On Time (Hours) LED On Time (Hours) Clear Time (ON/ OFF Password=50)						
	Temp. Info	Head Temp. Base Temp.						
	Error. Info	...						
	Software.V	1U V 1.X.X 2U V 1.X.X 3U V 1.X.X 4U V 1.X.X						
Program	Play Scene/ Loop	User Scene 1 User Scene 2						
	Edit User Scene	User Scene 1 User Scene 2	Edit Step 1...15 Edit Step 1...15	Edit Manual + Hold + Fade	Manual+0.1s- 20min			
	Clear Program	User Scene 1 User Scene 2 Clear All	Clear Step1...15 + Clear Scene Clear Step1...15 + Clear Scene					

8. DMX channel table:

ST.	Function	Values	
1	Dimmer	0~255	Dimmer0 to 100%
2	Dimmer fine	0~255	Dimmer Fine
		0~31	Shutter closed
		32~63	Shutter open
		64~95	Strobe slow to fast
		96~127	Shutter open
		128~159	Pulse effect slow to fast
		160~191	Shutter open
		192~223	Random strobe slow to fast
		224~255	Shutter open
3	Shutter	0~4	Open
		5~19	Gobo 1
		20~34	Gobo 2
		35~49	Gobo 3
		50~64	Gobo 4
		65~79	Gobo 5
		80~94	Gobo 6
		95~109	Gobo 1 shake (slow-fast)
		110~124	Gobo 2 shake (slow-fast)
		125~139	Gobo 3 shake (slow-fast)
4	Gobo Wheel	140~154	Gobo 4 shake (slow-fast)
		155~169	Gobo 5 shake (slow-fast)
		170~189	Gobo 6 shake (slow-fast)
		190~221	Clockwise Gobo Wheel Rotation Fast -> Slow
		222~223	No Rotation
		224~255	Counter Clockwise Gobo Wheel Rotation. Slow -> Fast,
		0~127	Indexing
		128~190	Clockwise Gobo Rotation. Fast -> Slow
		190~192	No Rotation
		193~255	Counter Clockwise Gobo Rotation. Slow -> Fast,
5	Gobo Rotation	0~255	Gobo indexing fine
		0~5	No Prism - Open
6	Prisms	6~255	Prism(6 Facet Circular Prism
		0~5	Prism Rot. Off
		6~128	Prism Indexing 0 ... 540°
		129~191	Clockwise Prism Rotation. Fast -> Slow
		192~192	No Rotation
8	Prisms Rotation	193~255	Counter Clockwise Prism Rotation. Slow -> Fast,
		0~255	Narrow to wide
		0~255	0% to 100%

		0~20	Standard
		21~40	Stage
		41~60	TV
		61~80	Architectural
		81~255	Theater
11	Dimmer Modes	0~30	No function
		31~40	Fan Mode Auto (Hold 3s)
		41~50	Fan Mode High (Hold 3s)
		51~60	Fan Mode Low (Hold 3s)
12	Device settings	61~70	All motor Reset (Hold 3s)
		71~255	No function (Hold 3s)

9. Control circuit diagram

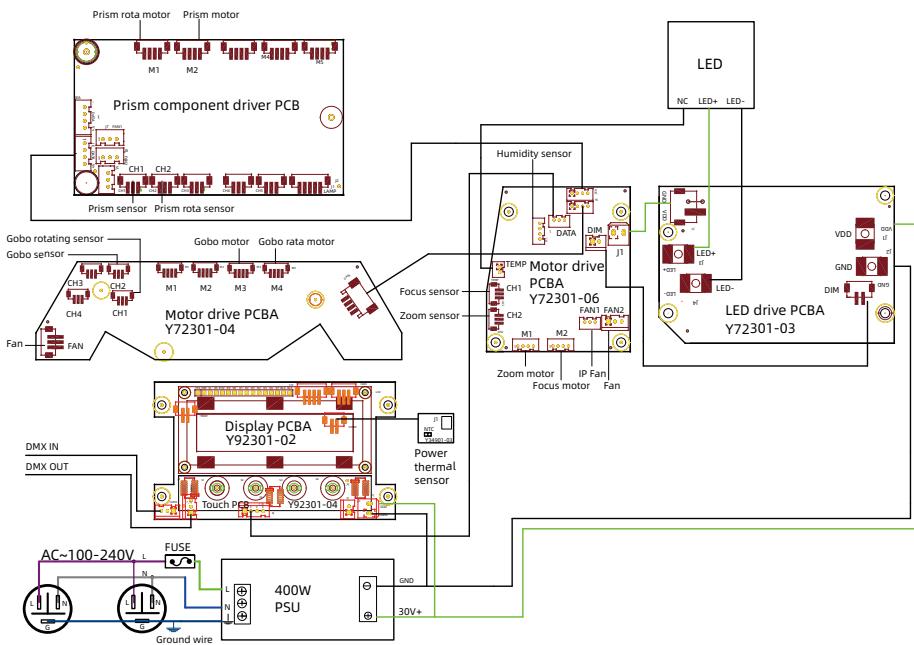


10. Regular maintenance

10.1 Cleaning and maintenance

Lighting fixtures require daily cleaning and maintenance, and their service life largely depends on the operating environment and standards. If you have any questions, please consult our technical engineers for advice. Maintenance and repair work not included in this book should be entrusted to our qualified technical engineers.



Attention! Damage caused by dust, e-liquid, or other reasons, as well as abnormal use, is not covered by the warranty.

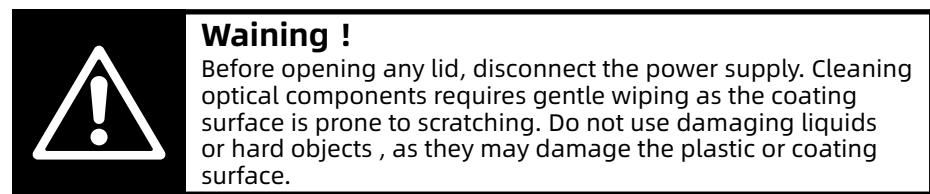

Warning !

Before opening any lid, disconnect the power supply. Cleaning optical components requires gentle wiping as the coating surface is prone to scratching. Do not use damaging liquids or hard objects, as they may damage the plastic or coating surface.

- When the lens is cracked or otherwise damaged, it should be replaced in a timely manner;
- When the brightness significantly decreases, the LED may have reached its expiration date and should be replaced in a timely manner;
- When the fixture cannot start, please check if the fixture power fuse is blown. If it is blown, a fuse of the same specification must be used for installation;
- The fixture is equipped with a temperature protection device. When the temperature is too high, the protection device will automatically reduce power.
- When this situation occurs, please check whether the fan is running normally, whether the fan and fan mesh are clogged with dust, identify the fault and repair it before starting the fixture. Please note that only qualified technicians are allowed to carry out maintenance work;
- To maintain smooth movement of the focusing lens, it is recommended to lubricate the guide rail of the focusing lens every three months. Excellent and high-temperature resistant lubricating grease should be used, and excessive grease should not be used as it can easily dirty adjacent components.

10.2 Fault analysis and handling

Fault description	Analysis	Processing method
No action after power on	Check if the power switch is turned on	Turn on
	Check if the fuse is blown	Replace
	Check if the output of PSU is normal	Detecting voltage
	Check if poor contact in the internal circuit	Reconnect
Uncontrolled lighting fixtures	Check if the DMX signal cable is connected correctly (If there is no signal, the display screen will flash)	Reconnect or replace
	Check if the address code is correct and if the DMX mode of the lighting fixture matches the settings	Reconfirm
	The main control PCB is damaged	Replace

Not bright	LED aging or damage	Replace
	Power PCB malfunction	Check/ Replace
	Loose or poor contact of the circuit	Reconnect
	PSU malfunction	Replace
Automatically turn off or dim the lights	LED aging	Replace
	Damaged cooling fan or abnormal wind speed	Replace
	Check the power output of the fan	Check/ Replace
	The temperature control switch is damaged	Replace
Gobo wheel misalignment or abnormal control	Poor contact of motor wire	Reconnect
	Corresponding motor drive board malfunction	Refixed
	Misalignment or magnetic damage between the magnetic tube and the positioning magnet	Adjust/Replace
	Motor malfunction	Replace
Weak light efficiency and uneven light spot	LED aging	Replace
	LED not centered with the lens	Adjust LED
	The optical mirror has accumulated dust or stains	Clean
	The optical mirror is damaged	Replace
Impure color	Weakening of light efficiency	Replace led PCB
	The color filter has accumulated dust or stains	Clean
	The color filter has been demolded or damaged	Replace
Gobo is unclear	The optical mirror has accumulated dust or stains	Clean
	The optical mirror is damaged	Replace
Head or base fan stops rotating	Check if the fan leads are installed properly or disconnected	Re connect
	Check if the fan is damaged	Replace
	Check if there are any other interfering objects within the operating range of the fan	Adjust



Attention! The above analysis is for abnormal reference only. Non professionals are not allowed to disassemble and repair the machine

