


CKC

P10

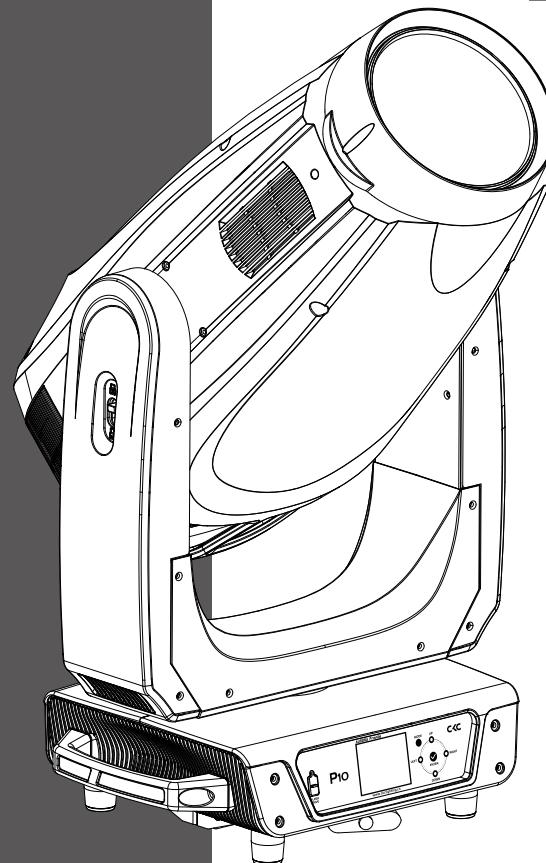

www.ckclighting.com

CKC LIGHTING CO.,LTD

Addr.:335 Nansha Avenue, Tung Chung Town,
Nansha District, Guangzhou City, China.
TEL: (020)3920 4506 FAX: (020)3920 4631
WEB: www.ckclighting.com



Before carrying out any installation, maintenance, or cleaning of the lighting fixtures, please confirm that the power has been cut off! Before using this fixture, please read this manual. Our company reserves the right to change product design and specifications without prior notice.

CONTENTS

1. Security Warning Information	1
2. Product Introduction	3
2.1 Exterior dimensions	3
2.2 Fixture packaging accessories	4
3. Main technical parameters of the equipment	4
4. Packaging and transportation	11
4.1 Disassemble packaging	11
4.2 Equipment installation	11
5. Installation Requirements Explanation	12
5.1 Clamp installation	12
5.2 Fixture installtion	14
5.3 Hanging Installation Diagram	14
6. Power and signal connection	15
6.1 Power and signal socket	15
6.2 Power Connect	15
6.3 Signal Connect	16
7. Control panel	16
7.1 Panel Introduction	16
7.2 System menu	17
8. DMX control channel table	19
9. Control circuit diagram	23
10. Regular maintenance	24
10.1 Cleaning and maintenance	24
10.2 Fault analysis and handling	24

★ Statement ★

- This manual contains important information on safe use and installation. Please read it carefully and follow the requirements for operation and installation. Please keep this manual properly;
- The equipment has good performance and complete packaging when it leaves the factory. The operator should strictly follow the warning items and operating instructions stated in the manual. Any malfunction or damage caused by misuse or neglect of the manual is not within the scope of our company's responsibility and warranty;
- The relevant information in this manual is for reference only. All lighting products are subject to the actual product. Any changes will not be notified separately, and our company reserves the right of final interpretation.

1. Security Warning Information



Attention !

Please read the safety requirements information in this section carefully before installing, powering on, operating, or repairing the lighting fixtures.



- This product is for professional use and is not suitable for other purposes;
- After receiving the lighting fixtures, please check if the packaging is complete and unpack to check if the equipment has been damaged due to transportation. If there is any damage caused by transportation, please do not use this lamp and contact local technicians or manufacturers as soon as possible;
- When transporting again, please use the original packaging materials;
- If there is obvious damage to the machine casing, it should be replaced in a timely manner;
- When hanging lamps, it is necessary to verify that the hanging equipment can withstand more than 6 times the weight of the lamp. After installation, it is necessary to verify that the lamp cover and installation buckle are secure and undamaged. At the same time, a safety rope should be used as an auxiliary safety for the lamp and fixed on the truss;
- The light source inside this luminaire should be replaced by the manufacturer, its service agent, or a similarly qualified person;
- If you have any other questions about how to safely operate the equipment, please contact our technical personnel or call our service hotline;
- This product has a protection level of IP20 and is suitable for indoor use;
- Avoid direct external strong light shining on the lens, which may cause the lens to focus and burn out internal components.



- Lighting fixtures should be kept clean and avoid prolonged use in overheated or dusty environments to prevent contact with chemical liquids;
- When using the product, attention should be paid to avoiding serious or fatal injuries caused by fire, heat, electrical shock, and ultraviolet radiation. Before powering on or installing, read the instruction manual first. Follow the safety precautions for operation and pay attention to the warning signs on the instructions and equipment;
- Only professionals are allowed to install, operate, and maintain lighting fixtures, and strictly follow the procedures stated in the operating instructions.



- The eyes cannot directly look at the luminous object;
- Do not connect this device to any dimmer;
- If visible damage occurs to the protective casing, lens, and display screen on the lighting fixture, it is considered as damage to the point of loss;
- Please do not place any filters or other items at the light outlet, and do not replace non original parts;
- The minimum safe illumination distance of the lamp is 5m.



- Before installation, please confirm that the power supply voltage used matches the voltage indicated on the light fixture. Each lighting fixture should be properly grounded and electrically installed according to relevant standards;
- Please disconnect the power before repairing or cleaning the equipment;
- During the operation of the lighting fixtures, touching the wires is prohibited to prevent electric shock;
- If the external soft cable or wire of this lamp is damaged, the wire should be replaced by the manufacturer, its agent, or a similarly qualified person to avoid danger;
- Avoid flammable liquids, water, or metal conductors from entering the interior of the lamp to prevent electric shock or fire. If any foreign objects enter the lamp, immediately cut off the power supply;
- When multiple lamps are operated in series, the signal lines can be connected in multiple ways, but the power supply must be connected separately.




- The lighting fixtures work normally at -20 °C to 45 °C . When replacing any components or accessories in the equipment, ensure that the power is disconnected to prevent electric shock and injury;
- The maximum surface temperature of the lamp during operation can reach 65 °C , please do not touch it with bare hands.






- The lighting fixtures must be installed in a sufficiently ventilated area, at least 0.5m away from adjacent surfaces, to ensure that no ventilation holes are blocked;
- Do not install the lighting fixtures directly on flammable objects;
- The minimum distance between all outer surfaces of the lamp and combustible materials is 0.5m.

2. Product Introduction


2.1 Exterior dimensions of lighting fixtures

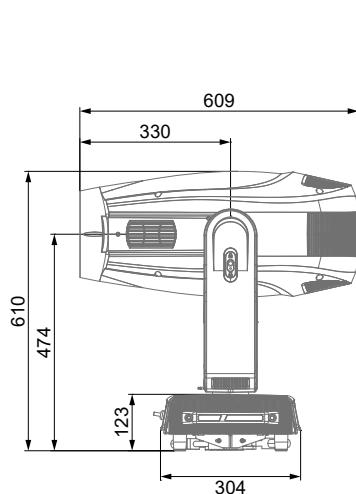

Integrated clamp version:
428 × 304 × 804 mm

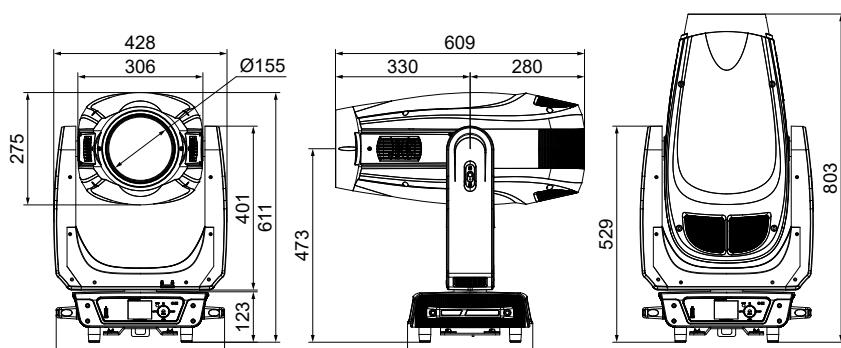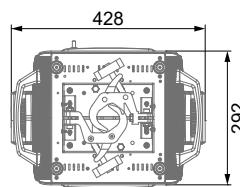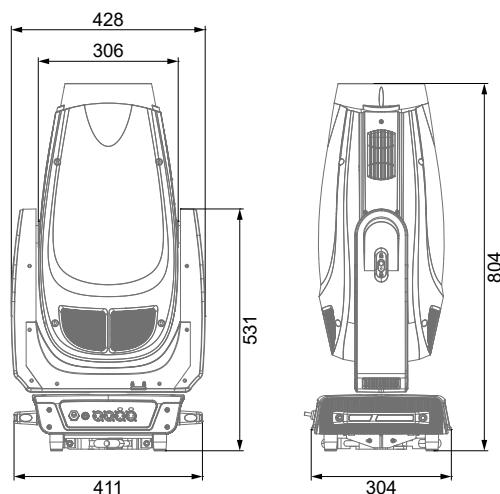


Normal version:
428 × 304 × 803 mm

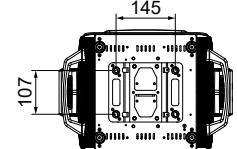

2.2 Packaging accessories

	Name	QTY
Normal version	Omega bracket	2 PCS
	Clamp	2 PCS
	Safety cable	1 PCS
Integrated clamp version	Safety cable	1 PCS

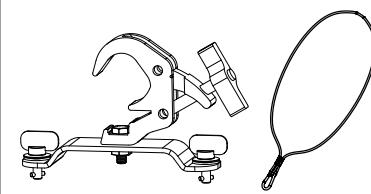

3. Main technical parameters of the equipment

Product execution standards: GB7000.1-2023, GB7000.217-2023, Q/YF-2017

● Electrical parameter

Rated input voltage: AC 100V-240V~ 50Hz/60Hz

Rated power of the entire fixture: 1213W

Power factor: 0.999F

Input Current: 5.45A 220V

● Source lifespan

>20000 hours




● Color system

CCT: 6500K

CRI: Ra/95 R9/95


Color wheel: 6+1

CMY+CTO

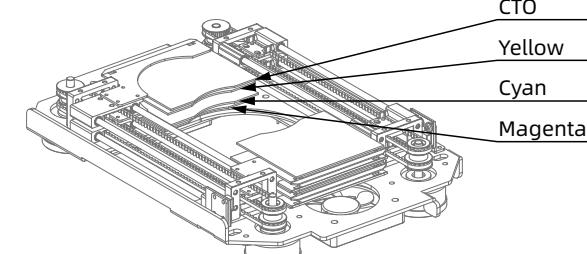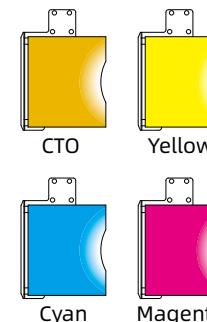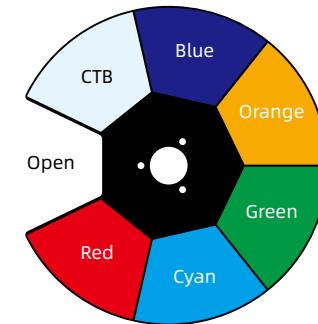


● Gobo system

Rotation gobo: 6 + 1
 Gobo outer diameter: 30 ± 0.2 mm
 Internal diameter: 25mm
 Thickness: 1.1mm

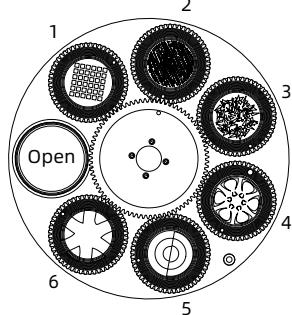


Fixed gobo wheel: 7 + 1
 Gobo outer diameter: 30 ± 0.2 mm
 Internal diameter: 25mm
 Thickness: 1.1mm

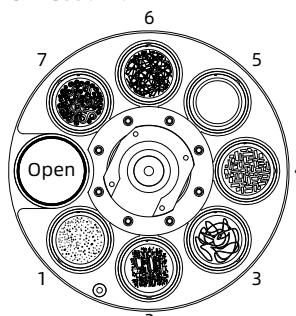


Gobo replace

1) Fixed gobo wheel


a). Disconnect the power and signal cables from point **A**. Use a screwdriver to remove the two screws at point **B**. Then unscrew the captive screw at point **C** to remove the assembly.

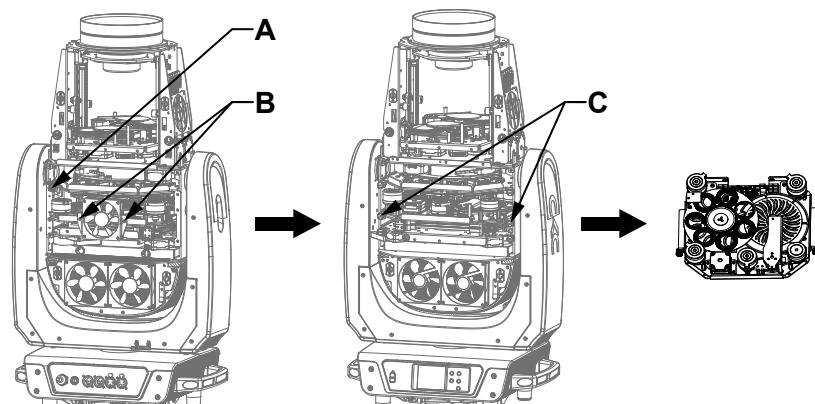


b). Unscrew the 2 screws on the front **D** of the gobo wheel component and remove the magnetic sensing plate; Loosen the 3 screws at point **E** and loosen the Gobo self rotating belt (to facilitate the next step of removing the Gobo wheel component);

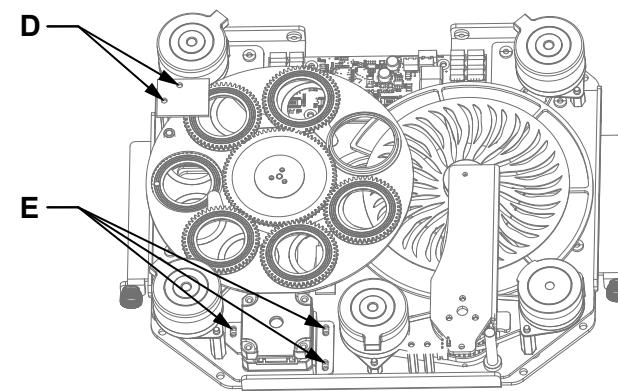


c). Reverse the components and loosen the 4 screws at **F** to loosen the belt; Unscrew the 4 screws at position **G** again to remove the gobo wheel component of the pattern disk;

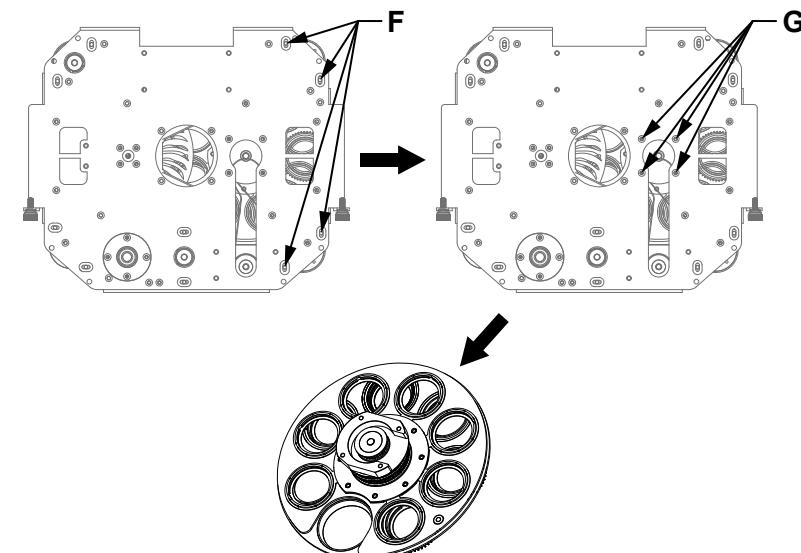


e). As shown in **H**, gently lift the gobo holder from the edge of the fixed gobo wheel and slowly pull it out to remove a single gobo holder;

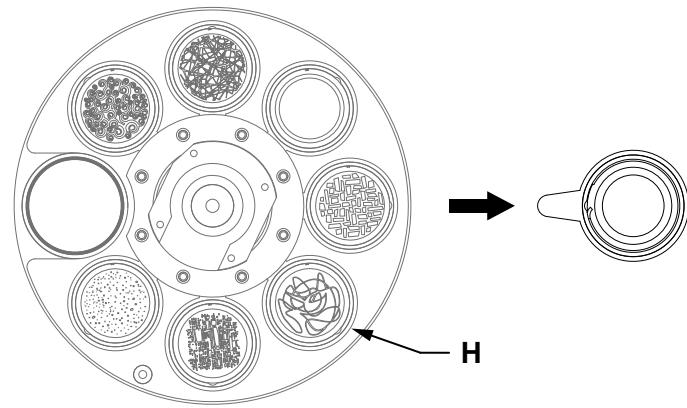


f). Use tweezers or other small grippers to remove the snap spring at point **I** (If the pattern piece is coated with glass glue for fixation, please use a professional cleaning agent to remove the glass glue before removing the snap spring to avoid damaging the gobo);

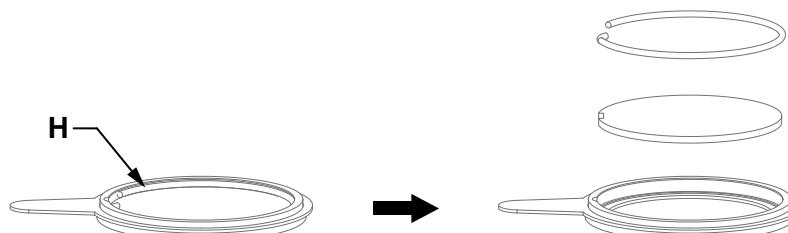

g). When assembling the gobo, avoid touching it directly with your hands. As shown in **J**, align the notch of the gobo with the recess of the driven wheel component (the coating surface of the gobo should face the light source);

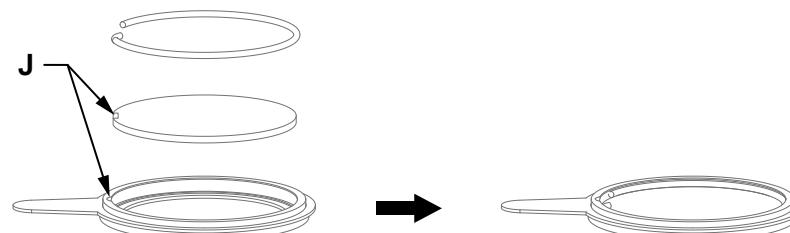


h). Insert the gobo wheel into the drive wheel assembly, as shown in **K**, and reinstall the gobo holder in the order it was removed;

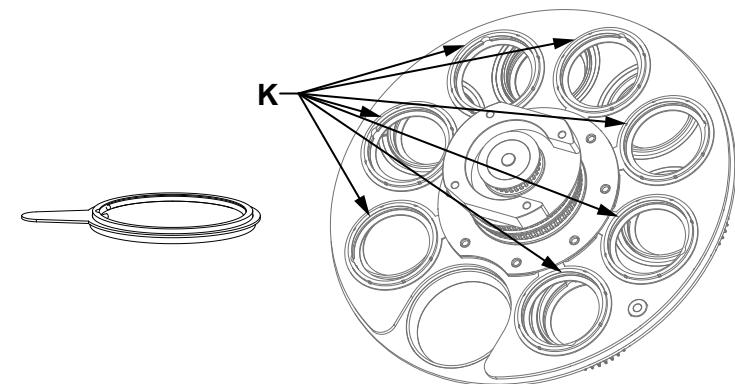


i). After installation, simply reinstall the gobo wheel component onto the light fixture.

2) Rotation gobo wheel


a). After removing the gobo assembly from the fixture, you can proceed to disassemble the gobo holder to replace the gobo, As shown in **A**, gently lift the driven wheel from the edge upwards from the front of the pattern plate and slowly pull it out to remove a single pattern seat;

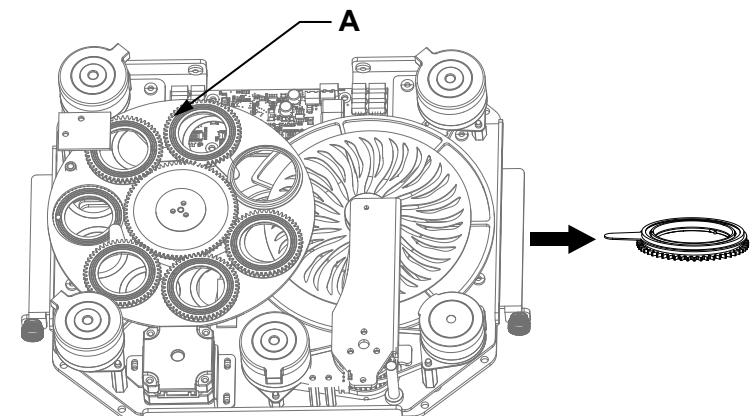


b). Use tweezers or other small grippers to remove the snap spring at point **B** (If the pattern piece is coated with glass glue for fixation, please use a professional cleaning agent to remove the glass glue before removing the snap spring to avoid damaging the gobo);

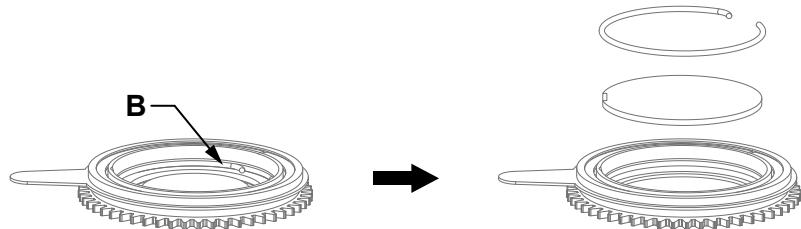

c). When assembling the gobo, avoid touching it directly with your hands. As shown in **C**, align the notch of the gobo with the recess of the driven wheel component (the coating surface of the gobo should face the light source);

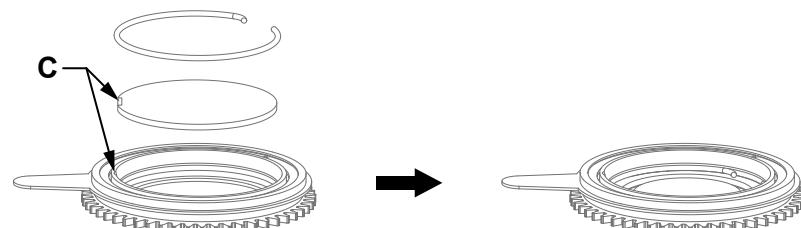


d). Insert the gobo holder into the drive wheel assembly, as shown in **D**, and reinstall the gobo holder in the order it was removed; The positioning point of the gobo holder should be aligned with the positioning point of the driving wheel; After installation, simply reinstall the gobo wheel component onto the light fixture.

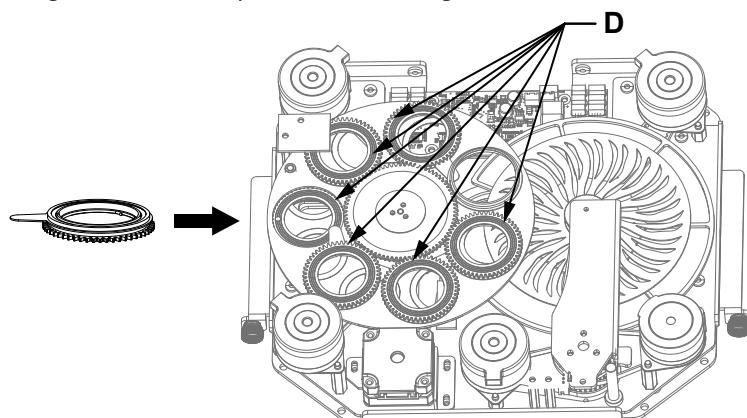


● Framing system

4 gratings achieve fast and smooth cutting, and the cutting direction and angle of each grating can be controlled separately. The single grating can achieve complete light closure, and the entire frame module can rotate $\pm 60^\circ$

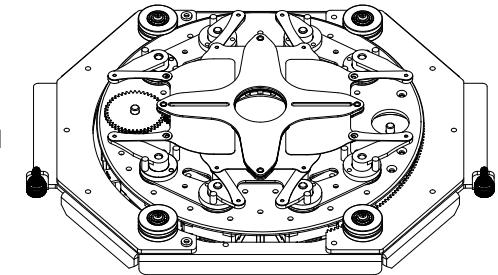


● Animation

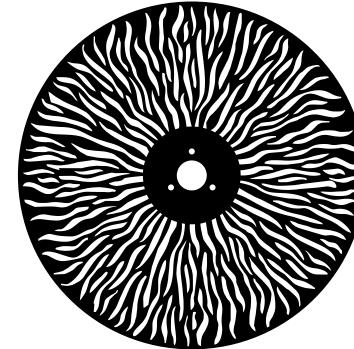

● Prism system


4 prism+6 linear

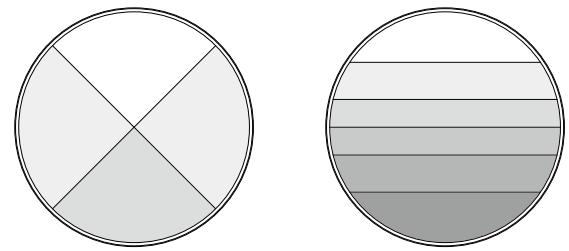

● Pan/Tilt

Pan scan:
540° or 630° 8-bit/16bit precision scanning

Tilt scan:
270° 8-bit/16bit precision scanning

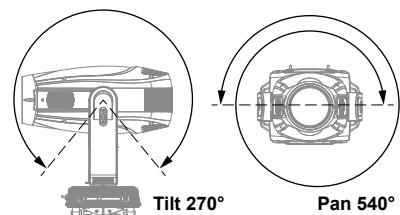


● Optical system

Beam angel: 6 ~ 52°
Source: 1000W CW LED
Output luminous flux: 23000 Lm

● Control and programming

Control channel: 36CH/52CH
Protocol: DMX512, RDM
Data connect: 3 or 5 pin signal in/out

● Illumination draw

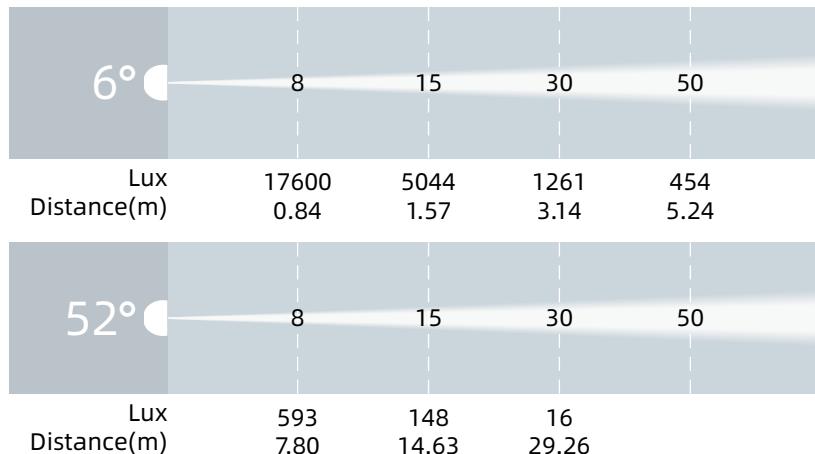

● Other effect function

Fast electronic strobe: 1~25Hz
Iris

Frost: Light frost+heavy frost

● Other features and functions

Weight: 40 KG(Integrated clamp version)
41 KG(Normal version)

4. Packaging and transportation

4.1 Disassemble packaging

 Notice: After receiving the fixture, please unpack and check for any damage caused by transportation. If there is any damage caused by transportation, please do not use this fixture and contact the local technical personnel or manufacturer as soon as possible.


4.2 Equipment packaging

- 1). Disconnect the power supply before packaging the lighting fixtures to allow them to cool completely;
- 2). Flight cases can only be stacked in two layers and are not allowed to be reversed.

5. Installation Requirements Explanation

5.1 Clamp install



The lighting fixtures can be installed on the stage or on any direction of the truss, and the clamp can be quickly and easily locked onto the truss.

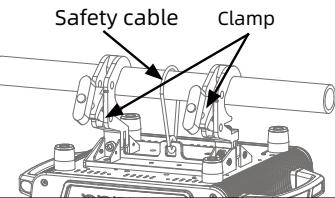



Warning!

The fixture uses an integrated clamp. To use it, lift the clamp up and then rotate it 180° to lock onto the truss. Additionally, a separate safety cable must be connected to the hole on the base. Note: Do not connect the safety cable to the carrying handle.

Integrated clamp installation

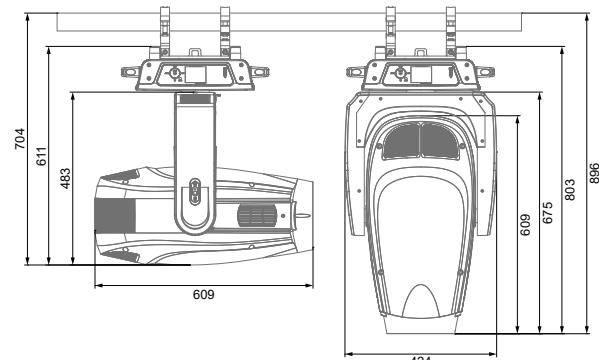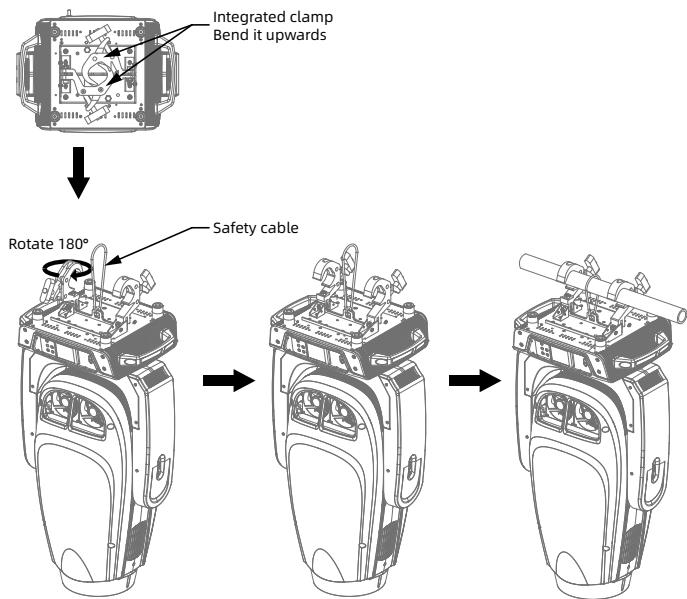


Quick lock and clamp install

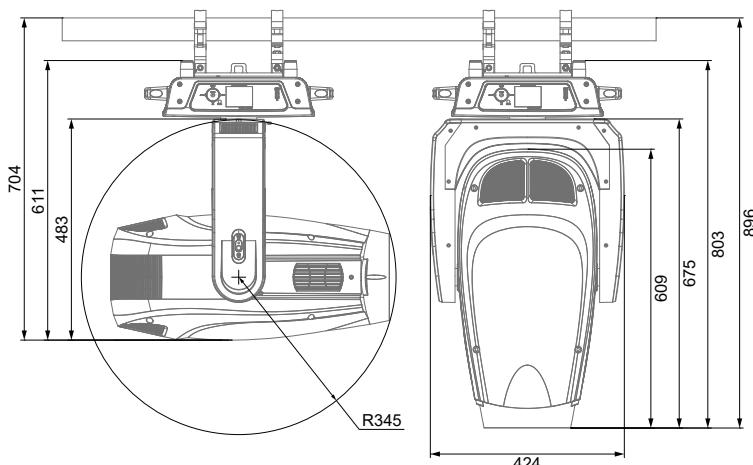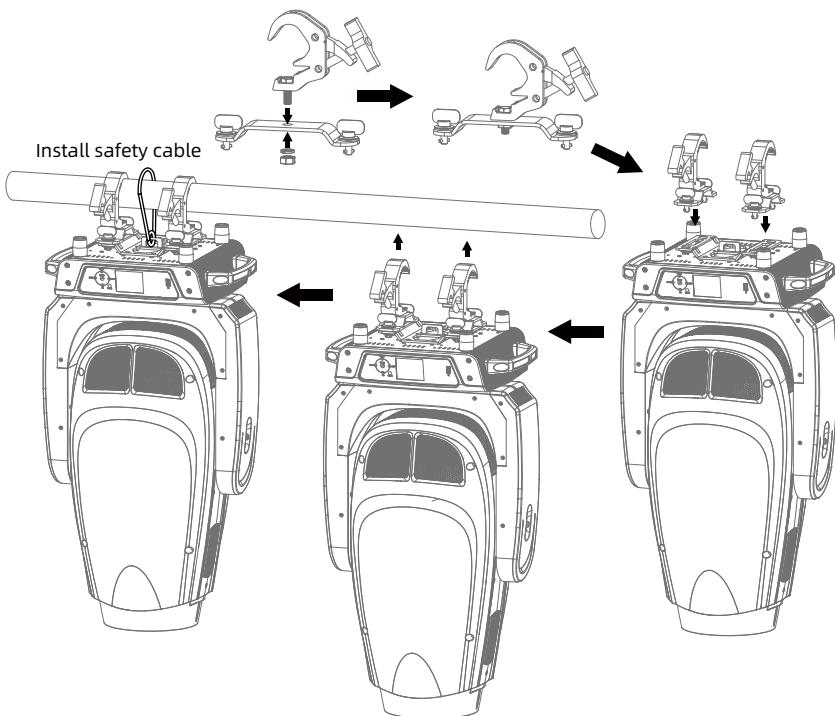

5.2 Equipment installation

- 1). Before installation, it is necessary to verify that the lamp hook and safety rope are not damaged, and that the installation object can withstand 6 times the total weight of the lamp and cable accessories;
- 2). Install the quick lock clamp on the base of the lamp body. Insert the clamp horizontally into the mounting hole of the base, rotate it clockwise 1/4 turn to lock it, and install the second clamp using the same method (the shape of the clamp should be based on the actual product).


5.3 Hanging Installation Diagram

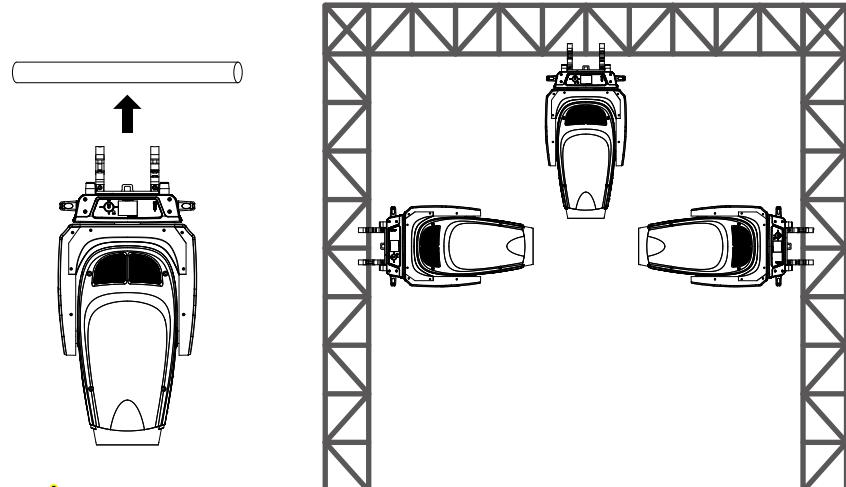

! Reminder: External beam source may damage internal lighting fixtures

External beams from direct sunlight, lighting fixtures, and lasers that are directly focused onto the casing or penetrate the lens to illuminate the interior of the fixture may cause damage to the components. This is a common issue with all lighting fixtures and does not occur alone with CKC products. Although there is no way to completely prevent this problem from occurring, following the following guidelines can prevent potential damage.


When unpacking, installing, using, and stopping the operation of the lighting fixtures, please do not expose the transparency of the fixtures the mirror is exposed to direct sunlight, other lighting fixtures, or laser beams,Do not directly focus the beam of this device onto another lighting fixture.

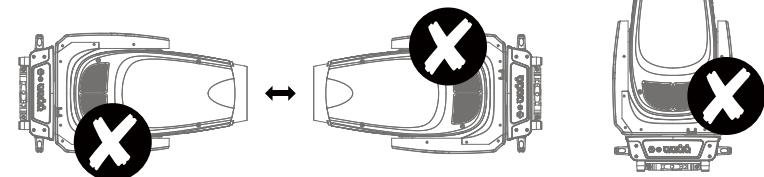


6. Power、Signal connect

6.1 Power and signal socket

- 1.Power input
- 2.Fuse holder
- 3.DMX input
- 4.DMX input
- 5.DMX output
- 6.DMX output

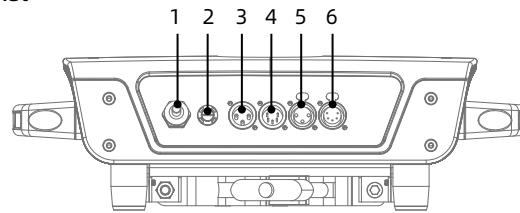

6.2 Power connect

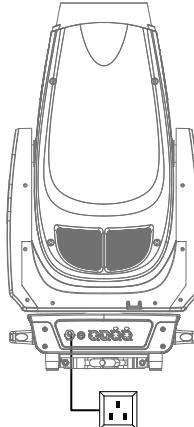

Connection method:

L(live wire) - brown wire

E(Ground wire) - yellow/green dual color line

N(Zero Line) - Blue Line

When connecting the power supply, please note that the voltage and frequency of the power supply must match the voltage and frequency marked on the light fixture. When multiple fixtures are used simultaneously, it is recommended to connect the power supply of each fixture separately, so that each fixture can be individually controlled for power on/off.

Attention: When connecting the power supply, the ground wire (yellow/green dual color wire) must be safely grounded and comply with all relevant electrical installation standards.




This product uses Powercon In/Out to connect power cords. Due to power limitations, a 2-square 220V power cord can carry up to 1 products.

Waining !


- Do not connect too many fixtures or overload a single power cord;
- Do not use power cords with damaged insulation layers, and do not place power cords on other wires;
- When the fixture is not in use or cleaned, please unplug the power cord; Do not forcefully unplug or drag the power cord directly.

6.3 Signal connect


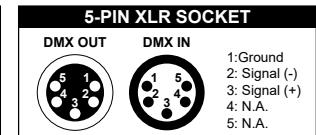


1:Ground
2: Signal (-)
3: Signal (+)
4: N.A.
5: N.A.

The lighting fixtures are equipped with standard DMX XLR input and output sockets. Please use DMX512 shielded twisted pair signal cables or Category 3/5 or above network twisted pair cables for connection. The typical connection distance for DMX signal lines is 150 meters. When transmitting signals over long distances, a DMX512 signal amplifier must be added.

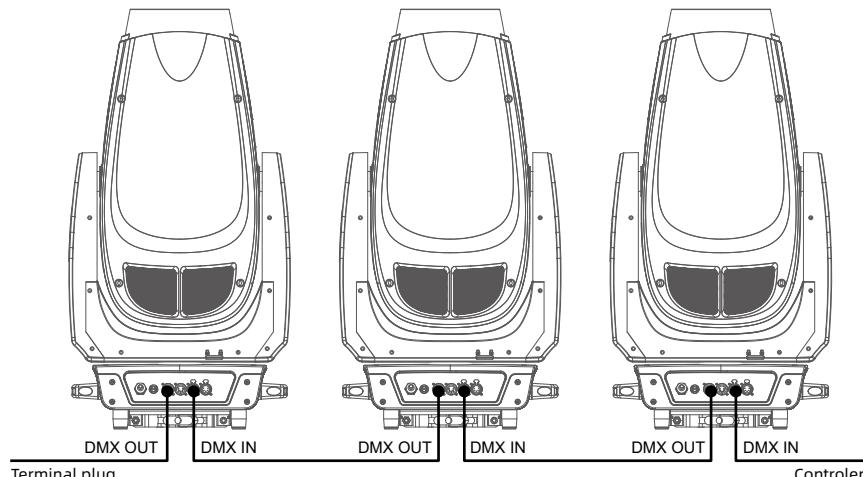


Terminal plug

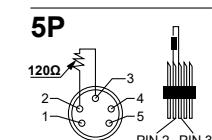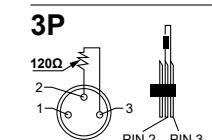

7. Control panel

7.1 Panel Introduction

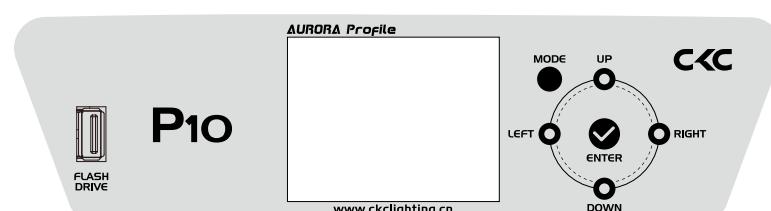

- Adopting a 2.8 "LCD display screen, the operation panel is equipped with a rechargeable battery, which can enter the menu to set address codes and make other settings without powering on;
- Press the MODE key to view or modify the lighting function settings, and press the UP, DOWN, LEFT, and RIGHT keys to select the function menu;
- Press the ENTER key to confirm your selected function menu, which will take you to the corresponding sub menu in the menu. Each menu item represents a specific function of the lighting fixture (as shown in the table below);
- Press the ENTER key to save your modifications or enter a submenu, and press the UP or DOWN key to modify values (increase or decrease values); Press the MODE key to return to the previous menu or exit.
- Press the MODE key to return to the previous menu or exit.

7.2. System menu

Note: The gray color block is the default setting value

Software Update Please Wait... CKC Fixture Type Check P10 Motor Reset		
SET	Dmx Presets	A001~AXXX
	User Mode	Standard(36CH) Extend (52CH)
Function	Status	No DMX Mode P.Reverse T.Reverse Pan Degree Feedback Move.Speed Hibernation Black/Hold/Auto ON/OFF ON/OFF 630/540 ON/OFF Speed 1~ 4 OFF,01M~99M, 15M
	Dim Mode	Standard Stage TV Architectural Theatre
	Temp. C/F	Celsius Fahrenheit
	Dim Curve	Linear Square Inv-Square S-Curve
	Frequency	1200Hz/3600Hz/5000Hz/10KHz/15KHz/20KHz/25KHz

Fan Set	Head Fan	Auto High Low
	Base Fan	Auto High
LCD.Set	Backlight Flip Display Key Lock DispFlash Language	01~60m OFF/ON OFF/ON OFF/ON English
Disp.Set	Channel Value Slave Set Auto.Prog	PAN..... Slave1,Slave2,Slave3 Master / Alone
DFSE	OFF/ON	
USB Update	OFF/ON	
Test	Reset.M	All Pan&Tilt Other
	Test.Chan	PAN
	Panel.Ctrl.	PAN =XXX :
	Calibrate	-Password 050- PAN :
Info	Time.Info	Current(Hours) Total Time(Hours) Last Time(Hours) Timer PIN>Password=50) Clear Last (ON/OFF)
	Temp. Info	Base Temp. Head Temp.
	Fan Speed	Base Fan1:xxxx RPM Base Fan2: xxxx RPM Cool Fan1: xxxx RPM
	Error. Info	Pan,Tilt.....
	Model. Info	P10
	Software.V	1U V1.X.X 2U V1.X.X 3U V1.X.X :

8. DMX channel table:



ST.	EX.	Function	Values	
1	1	Pan	000 ~ 255	Pan Movement (540/630)
2	2	Pan fine	000 ~ 255	Pan Fine
3	3	Tilt	000 ~ 255	Tilt Movement(270)
4	4	Tilt fine	000 ~ 255	Tilt Fine
5	5	Dimmer	000 ~ 255	Intensity 0 to 100%
6	6	Dimmer fine	000 ~ 255	Dimmer Intensity Fine
Shutter, Strobe:				
7	7	Strobe functions	000 ~ 031	Shutter Closed
			032 ~ 063	Shutter Open
			064 ~ 095	Strobe Slow to Fast
			096 ~ 127	Shutter Open
			128 ~ 159	Pulse effect Slow to fast
			160 ~ 191	Shutter Open
			192 ~ 223	Random Strobe Slow to Fast
			224 ~ 255	Shutter Open
8	8	Cyan	000 ~ 255	0% to 100%
9		Cyan Fine	000 ~ 255	0% to 100%
9	10	Magenta	000 ~ 255	0% to 100%
11		Magenta Fine	000 ~ 255	0% to 100%
10	12	Yellow	000 ~ 255	0% to 100%
13		Yellow Fine	000 ~ 255	0% to 100%
11	14	CTO	000 ~ 255	0% to 100%
15		CTO Fine	000 ~ 255	0% to 100%
Color Wheel :				
12	16	Colour Wheel	000 ~ 005	Color off (Open)
			006 ~ 115	Open → Color1... Color6 → Open
			116 ~ 120	Open
			121 ~ 130	Deep Red
			131 ~ 140	Medium Blue
			141 ~ 150	Deep Green
			151 ~ 160	Amber
			161 ~ 170	Congo Blue
			171 ~ 180	CTB
			181 ~ 192	Color off (open)
			193 ~ 223	Color Wheel Rot.Slow -> Fast, CW
			224 ~ 224	Color Wheel Rot. Stop
			225 ~ 255	Color Wheel Rot.Fast -> Slow, CCW
13	17	Colour Wheel Fine	000 ~ 255	0% to 100%

				Rotanting Gobos:	
14	18	GoboWheel 1	000 ~ 005	Open	
006 ~ 020	Gobo 1				
021 ~ 035	Gobo 2				
036 ~ 050	Gobo 3				
051 ~ 065	Gobo 4				
066 ~ 080	Gobo 5				
081 ~ 095	Gobo 6				
096 ~ 110	Gobo 1 Shake (Slow-Fast)				
111 ~ 125	Gobo 2 Shake (Slow-Fast)				
126 ~ 140	Gobo 3 Shake (Slow-Fast)				
141 ~ 155	Gobo 4 Shake (Slow-Fast)				
156 ~ 170	Gobo 5 Shake (Slow-Fast)				
171 ~ 185	Gobo 6 Shake (Slow-Fast)				
186 ~ 192	Open				
Rotanting Gobo Index:			193 ~ 223	Gobo Wheel Rot.Slow -> Fast, CW	
Gobo 1 Rotation			224 ~ 224	Gobo Wheel Rot. Stop	
15	19	Gobo 1 Rotation	225 ~ 255	Gobo Wheel Rot.Fast -> Slow, CCW	
16	20		000 ~ 255	Gobo indexing fine	
Fixed Gobo:					
GoboWheel 2			000 ~ 005	Open	
Gobo 1			006 ~ 018	Gobo 1	
Gobo 2			019 ~ 031	Gobo 2	
Gobo 3			032 ~ 044	Gobo 3	
Gobo 4			045 ~ 057	Gobo 4	
Gobo 5			058 ~ 070	Gobo 5	
Gobo 6			071 ~ 083	Gobo 6	
Gobo 7			084 ~ 096	Gobo 7	
Gobo 1 Shake (Slow-Fast)			097 ~ 109	Gobo 1 Shake (Slow-Fast)	
Gobo 2 Shake (Slow-Fast)			110 ~ 122	Gobo 2 Shake (Slow-Fast)	
Gobo 3 Shake (Slow-Fast)			123 ~ 135	Gobo 3 Shake (Slow-Fast)	
Gobo 4 Shake (Slow-Fast)			136 ~ 148	Gobo 4 Shake (Slow-Fast)	
Gobo 5 Shake (Slow-Fast)			149 ~ 161	Gobo 5 Shake (Slow-Fast)	
Gobo 6 Shake (Slow-Fast)			162 ~ 174	Gobo 6 Shake (Slow-Fast)	
Gobo 7 Shake (Slow-Fast)			175 ~ 187	Gobo 7 Shake (Slow-Fast)	
Open			188 ~ 192	Open	

			193 ~ 223	Gobo Wheel Rot.Slow -> Fast, CW
			224 ~ 224	Gobo Wheel Rot. Stop
			225 ~ 255	Gobo Wheel Rot.Fast -> Slow, CCW
18	22	Zoom	000 ~ 255	Narrow to wide
	23	Zoom fine	000 ~ 255	Narrow to wide
19	24	Focus	000 ~ 255	0% to 100%
	25	Focus fine	000 ~ 255	0% to 100%
				Iris:
20	26	Iris	000 ~ 225	Open - Close
			226 ~ 235	Pulse Up, Slow -> Fast
			236 ~ 245	Pulse Down, Slow -> Fast
			246 ~ 255	Random Effect, Slow -> Fast
				PrismWheel:
21	27	Prism Wheel	000 ~ 005	No Prism
			006 ~ 130	Prism 1 (6 liner Prism)
			131 ~ 255	Prism 2 (4 Facet Prism)
				Prism rotation:
22	28	Prism rotation	000 ~ 005	Prism Rot. Off
			006 ~ 128	Prism Position 0 ... 540°
			129 ~ 191	Prism Rotation, Slow -> Fast, CW
			192 ~ 192	Prism Rotation Stop
			193 ~ 255	Prism Rotation, Fast -> Slow, CCW
23	29	Frost 1	000 ~ 255	0% to 100%
24	30	Frost 2	000 ~ 255	0% to 100%
				Animation1:
25	31	Effect Wheel	000 ~ 005	Wheel Rot. Off
			006 ~ 128	Wheel Position 0 ... 540°
			129 ~ 191	Wheel Rot. Slow -> Fast, CW
			192 ~ 192	Wheel Rot. Stop
			193 ~ 255	Wheel Rot. Fast -> Slow, CCW
26	32	Blade 1A	000 ~ 255	0% - 100%
	33	Blade 1A Fine	000 ~ 255	0% - 100%
27	34	Blade 1B	000 ~ 255	0% - 100%
	35	Blade 1B Fine	000 ~ 255	0% - 100%
28	36	Blade 2A	000 ~ 255	0% - 100%
	37	Blade 2A fine	000 ~ 255	0% - 100%
29	38	Blade 2B	000 ~ 255	0% - 100%
	39	Blade 2B fine	000 ~ 255	0% - 100%
30	40	Blade 3A	000 ~ 255	0% - 100%
	41	Blade 3A fine	000 ~ 255	0% - 100%
31	42	Blade 3B	000 ~ 255	0% - 100%

	43	Blade 3B fine	000 ~ 255	0% - 100%
32	44	Blade 4A	000 ~ 255	0% - 100%
	45	Blade 4A fine	000 ~ 255	0% - 100%
33	46	Blade 4B	000 ~ 255	0% - 100%
	47	Blade 4B fine	000 ~ 255	0% - 100%
34	48	Shape Rotation	000 ~ 255	Rotation from 0 to 120°
	49	Shape Rotation Fine	000 ~ 255	0% - 100%
	50	Pan/Tilt Speed	000 ~ 255	Pan/Tilt Fast -> Slow
				Dimmer Mode:
35	51	Set dimmer Mode	000 ~ 020	Standard
			021 ~ 040	Stage
			041 ~ 060	TV
			061 ~ 080	Architectural
			081 ~ 100	Theater
			101 ~ 255	Default to Unit Setting
				Device settings:
36	52	Device settings	000 ~ 002	No function
			003 ~ 004	OFF Display Backlight
			005 ~ 006	On Display Backlight
			007 ~ 017	Invert Pan on (Hold 3s)
			018 ~ 029	Invert Pan off (Hold 5s)
			030 ~ 041	Invert Tilt on (Hold 3s)
			042 ~ 053	Invert Tilt off (Hold 5s)
			054 ~ 065	Fan Auto (Hold 3s)
			066 ~ 077	Fan Silent (Hold 5s)
			078 ~ 089	Linear Dimmer Curve (Hold 3s)
			090 ~ 101	Square Dimmer Curve (Hold 3s)
			102 ~ 113	Inv-Square Dimmer Curve (Hold 3s)
			114 ~ 125	S - Dimmer Curve (Hold 3s)
			126 ~ 137	Led Freq. 1200 Hz (Hold 3s)
			138 ~ 149	Led Freq. 3600 Hz (Hold 3s)
			150 ~ 161	Led Freq. 5000 Hz (Hold 3s)
			162 ~ 173	Led Freq. 10.000 Hz (Hold 3s)
			174 ~ 185	Led Freq. 15.000 Hz (Hold 3s)
			186 ~ 197	Led Freq. 20.000 Hz (Hold 3s)
			198 ~ 209	Led Freq. 25.000 Hz (Hold 3s)
			210 ~ 221	Reset Pan/Tilt (Hold 3s)
			222 ~ 233	Reset only Head (Hold 3s)
			234 ~ 255	Reset All Functions (Hold 3s)

9. Control circuit diagram

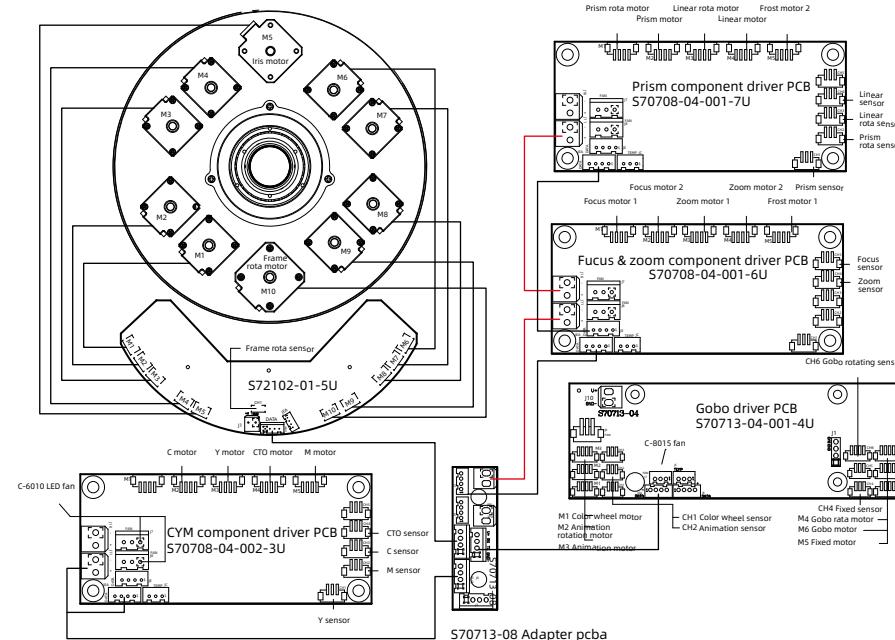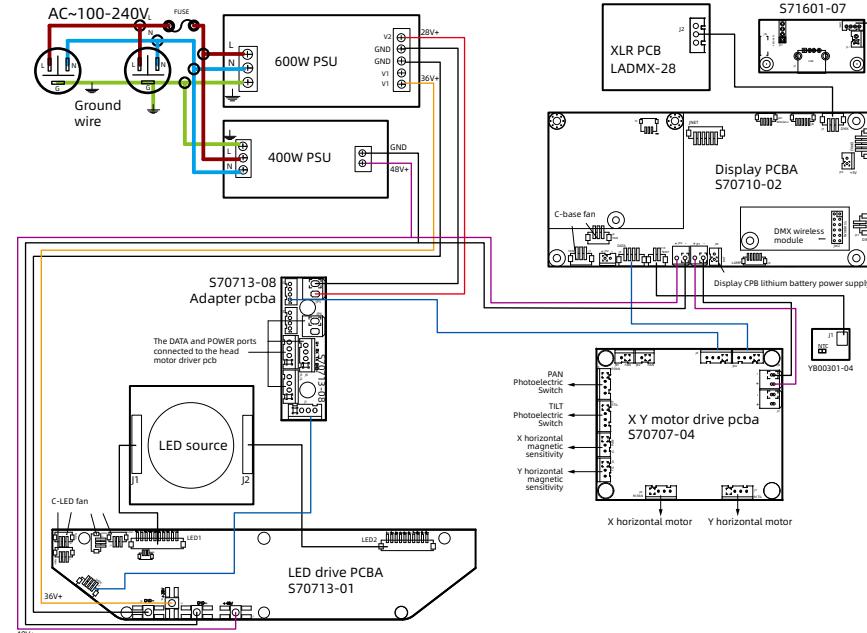


10. Regular maintenance

10.1 Cleaning and maintenance

Lighting fixtures require daily cleaning and maintenance, and their service life largely depends on the operating environment and standards. If you have any questions, please consult our technical engineers for advice. Maintenance and repair work not included in this book should be entrusted to our qualified technical engineers.



Attention! Damage caused by dust, e-liquid, or other reasons, as well as abnormal use, is not covered by the warranty.

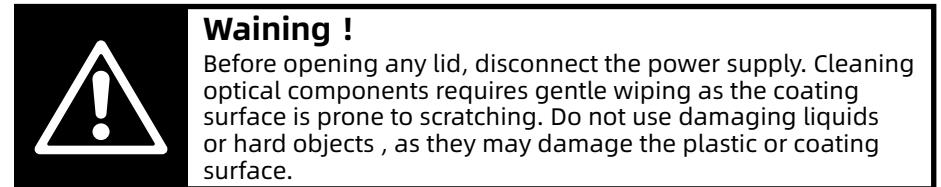

- When the lens is cracked or otherwise damaged, it should be replaced in a timely manner;
- When the brightness significantly decreases, the LED may have reached its expiration date and should be replaced in a timely manner;
- When the fixture cannot start, please check if the fixture power fuse is blown. If it is blown, a fuse of the same specification must be used for installation;
- The fixture is equipped with a temperature protection device. When the temperature is too high, the protection device will automatically reduce power.
- When this situation occurs, please check whether the fan is running normally, whether the fan and fan mesh are clogged with dust, identify the fault and repair it before starting the fixture. Please note that only qualified technicians are allowed to carry out maintenance work;
- To maintain smooth movement of the focusing lens, it is recommended to lubricate the guide rail of the focusing lens every three months. Excellent and high-temperature resistant lubricating grease should be used, and excessive grease should not be used as it can easily dirty adjacent components.

10.2 Fault analysis and handling

Fault description	Analysis	Processing method
No action after power on	Check if the power switch is turned on	Turn on
	Check if the fuse is blown	Replace
	Check if the output of PSU is normal	Detecting voltage
	Check if poor contact in the internal circuit	Reconnect

Uncontrolled lighting fixtures	Check if the DMX signal cable is connected correctly (If there is no signal, the display screen will flash)	Reconnect or replace
	Check if the address code is correct and if the DMX mode of the lighting fixture matches the settings	Reconfirm
	The main control PCB is damaged	Replace
Not bright	LED aging or damage	Replace
	Power PCB malfunction	Check/ Replace
	Loose or poor contact of the circuit	Reconnect
	PSU malfunction	Replace
Automatically turn off or dim the lights	LED aging	Replace
	Damaged cooling fan or abnormal wind speed	Replace
	Check the power output of the fan	Check/ Replace
	The temperature control switch is damaged	Replace
Gobo wheel misalignment or abnormal control	Poor contact of motor wire	Reconnect
	Corresponding motor drive board malfunction	Refixed
	Misalignment or magnetic damage between the magnetic tube and the positioning magnet	Adjust/Replace
	Motor malfunction	Replace
Weak light efficiency and uneven light spot	LED aging	Replace
	LED not centered with the lens	Adjust LED
	The optical mirror has accumulated dust or stains	Clean
	The optical mirror is damaged	Replace
Impure color	Weakening of light efficiency	Replace led PCB
	The color filter has accumulated dust or stains	Clean
	The color filter has been demolded or damaged	Replace

Gobo is unclear	The optical mirror has accumulated dust or stains	Clean
	The optical mirror is damaged	Replace
Head or base fan stops rotating	Check if the fan leads are installed properly or disconnected	Re connect
	Check if the fan is damaged	Replace
	Check if there are any other interfering objects within the operating range of the fan	Adjust



Attention! The above analysis is for abnormal reference only. Non professionals are not allowed to disassemble and repair the machine

