




# P500 FC IP

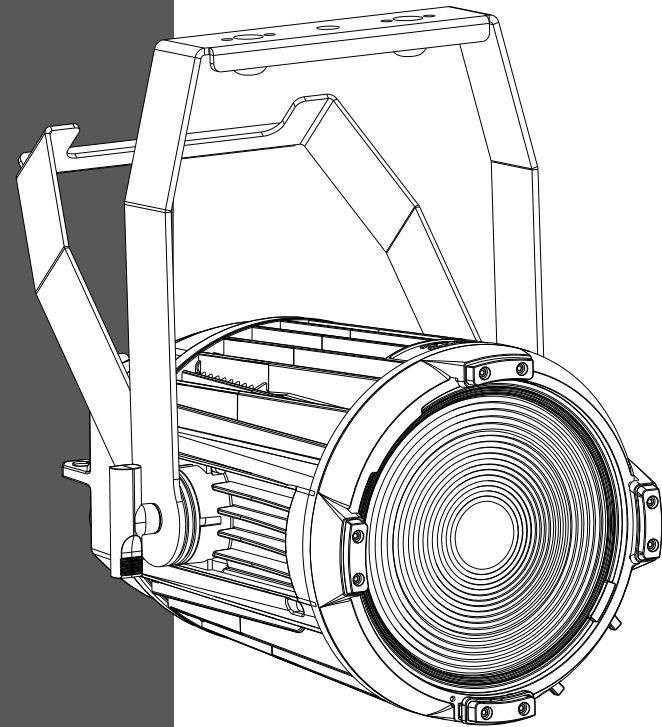

[www.ckclighting.com](http://www.ckclighting.com)

## CKC LIGHTING CO.,LTD

Addr.:335 Nansha Avenue, Tung Chung Town,  
Nansha District, Guangzhou City, China.  
TEL: (020)3920 4506 FAX: (020)3920 4631  
WEB: [www.ckclighting.com](http://www.ckclighting.com)



Before carrying out any installation, maintenance, or cleaning of the lighting fixtures, please confirm that the power has been cut off! Before using this fixture, please read this manual. Our company reserves the right to change product design and specifications without prior notice.

# CONTENTS

|                                                      |           |
|------------------------------------------------------|-----------|
| <b>1. Security Warning Information</b>               | <b>1</b>  |
| <b>2. Product Introduction</b>                       | <b>3</b>  |
| 2.1 Exterior dimensions                              | 3         |
| 2.2 Fixture packaging accessories                    | 3         |
| <b>3. Main technical parameters of the equipment</b> | <b>3</b>  |
| <b>4. Packaging and transportation</b>               | <b>4</b>  |
| 4.1 Disassemble packaging                            | 4         |
| 4.2 Equipment installation                           | 4         |
| <b>5. Installation Requirements Explanation</b>      | <b>4</b>  |
| 5.1 Clamp installation                               | 4         |
| 5.2 Fixture installtion                              | 6         |
| 5.3 Hanging Installation Diagram                     | 6         |
| <b>6. Power and signal connection</b>                | <b>6</b>  |
| 6.1 Power and signal socket                          | 6         |
| 6.2 Power Connect                                    | 7         |
| 6.3 Signal Connect                                   | 7         |
| <b>7. Control panel</b>                              | <b>8</b>  |
| 7.1 Panel Introduction                               | 8         |
| 7.2 System menu                                      | 9         |
| 7.3 Touch Bar Mode operation                         | 11        |
| <b>8. DMX control channel table</b>                  | <b>11</b> |
| <b>9. Control circuit diagram</b>                    | <b>17</b> |
| <b>10. Regular maintenance</b>                       | <b>17</b> |
| 10.1 Cleaning and maintenance                        | 17        |
| 10.2 Fault analysis and handling                     | 18        |

## ★ Statement ★

- This manual contains important information on safe use and installation. Please read it carefully and follow the requirements for operation and installation. Please keep this manual properly;
- The equipment has good performance and complete packaging when it leaves the factory. The operator should strictly follow the warning items and operating instructions stated in the manual. Any malfunction or damage caused by misuse or neglect of the manual is not within the scope of our company's responsibility and warranty;
- The relevant information in this manual is for reference only. All lighting products are subject to the actual product. Any changes will not be notified separately, and our company reserves the right of final interpretation.

### 1. Security Warning Information



#### Attention !

Please read the safety requirements information in this section carefully before installing, powering on, operating, or repairing the lighting fixtures.



- This product is for professional use and is not suitable for other purposes;
- After receiving the lighting fixtures, please check if the packaging is complete and unpack to check if the equipment has been damaged due to transportation. If there is any damage caused by transportation, please do not use this lamp and contact local technicians or manufacturers as soon as possible;
- When transporting again, please use the original packaging materials;
- If there is obvious damage to the machine casing, it should be replaced in a timely manner;
- When hanging lamps, it is necessary to verify that the hanging equipment can withstand more than 6 times the weight of the lamp. After installation, it is necessary to verify that the lamp cover and installation buckle are secure and undamaged. At the same time, a safety rope should be used as an auxiliary safety for the lamp and fixed on the truss;
- The light source inside this luminaire should be replaced by the manufacturer, its service agent, or a similarly qualified person;
- If you have any other questions about how to safely operate the equipment, please contact our technical personnel or call our service hotline;
- This product has a protection level of IP65 and can be used both indoors and outdoors;



- Lighting fixtures should be kept clean and avoid prolonged use in overheated or dusty environments to prevent contact with chemical liquids;
- When using the product, attention should be paid to avoiding serious or fatal injuries caused by fire, heat, electrical shock, and ultraviolet radiation. Before powering on or installing, read the instruction manual first. Follow the safety precautions for operation and pay attention to the warning signs on the instructions and equipment;
- Only professionals are allowed to install, operate, and maintain lighting fixtures, and strictly follow the procedures stated in the operating instructions.



- The eyes cannot directly look at the luminous object;
- Do not connect this device to any dimmer;
- If visible damage occurs to the protective casing, lens, and display screen on the lighting fixture, it is considered as damage to the point of loss;
- Please do not place any filters or other items at the light outlet, and do not replace non original parts;
- The minimum safe illumination distance of the lamp is 1m.



- Before installation, please confirm that the power supply voltage used matches the voltage indicated on the light fixture. Each lighting fixture should be properly grounded and electrically installed according to relevant standards;
- Please disconnect the power before repairing or cleaning the equipment;
- During the operation of the lighting fixtures, touching the wires is prohibited to prevent electric shock;
- If the external soft cable or wire of this lamp is damaged, the wire should be replaced by the manufacturer, its agent, or a similarly qualified person to avoid danger;
- Avoid flammable liquids, water, or metal conductors from entering the interior of the lamp to prevent electric shock or fire. If any foreign objects enter the lamp, immediately cut off the power supply;
- When multiple lamps are operated in series, the signal lines can be connected in multiple ways, but the power supply must be connected separately.



- The lighting fixtures work normally at -20 °C to 45 °C . When replacing any components or accessories in the equipment, ensure that the power is disconnected to prevent electric shock and injury;
- The maximum surface temperature of the lamp during operation can reach 65 °C , please do not touch it with bare hands.




- The lighting fixtures must be installed in a sufficiently ventilated area, at least 0.5m away from adjacent surfaces, to ensure that no ventilation holes are blocked;
- Do not install the lighting fixtures directly on flammable objects;
- The minimum distance between all outer surfaces of the lamp and combustible materials is 0.5m.

## 2. Product Introduction


### 2.1 Exterior dimensions of lighting fixtures

304 × 357 × 453 mm

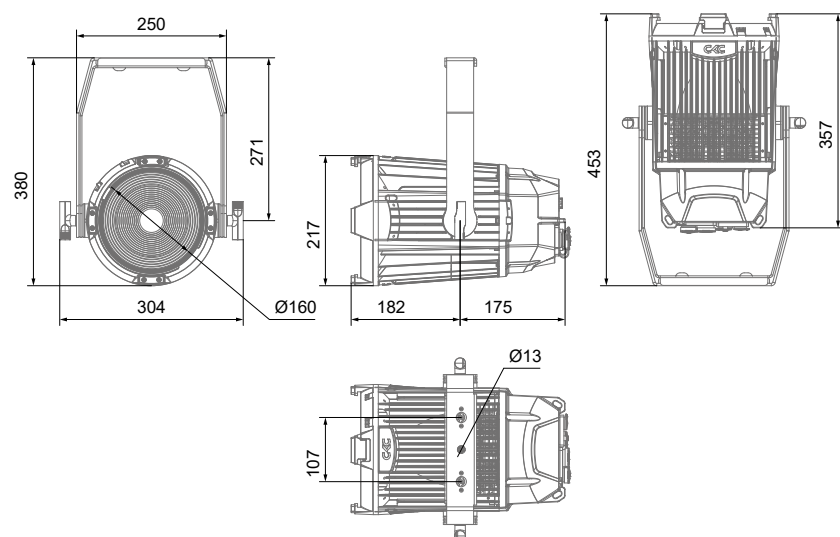

### 2.2 Packaging accessories

| Name          | QTY   |
|---------------|-------|
| Omega bracket | 1 PCS |
| Safety cable  | 1 PCS |

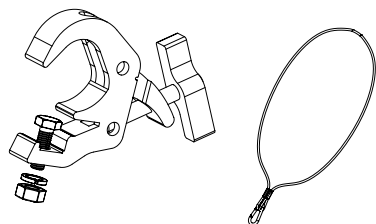

## 3. Main technical parameters of the equipment

Product execution standards: GB7000.1-2023, GB7000.217-2023, Q/YF-2017

### ● Electrical parameter

Rated input voltage: AC 100V-240V~ 50Hz/60Hz  
 Rated power: 356 W  
 Power factor: 0.957F  
 Input Current: 1.6A 220V

### ● Source lifespan

> 20000 hours


### ● Optical system

Source: 500W RGBAL LED  
 Output luminous flux: 11300 Lm  
 Beam angel: 11° /22° /30° /52°  
 Field angle: 18° /32° /39° /75°  
 CCT: 2400 ~ 8000 K

### ● Control and programming

Control channel: 1CH/6CH/11CH/18CH/19CH/9CH/14CH/15CH  
 Protocol: DMX512, RDM  
 Data connect: 3 pin or 5pin signal in/out

### ● Illumination draw

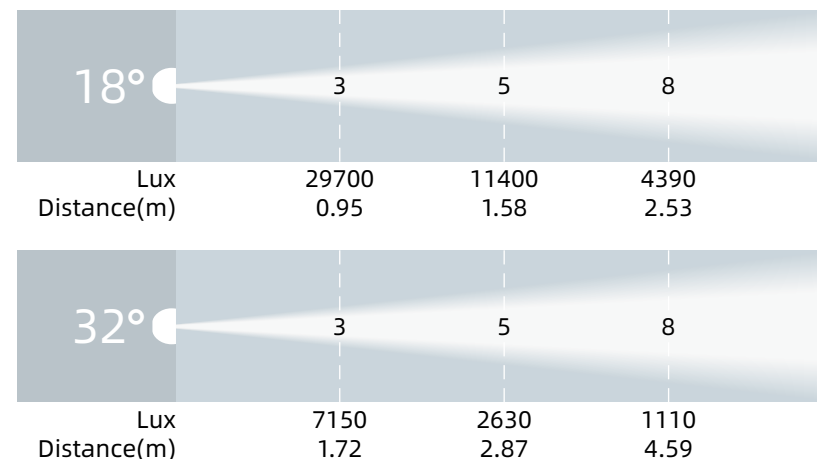

### ● Other effect function

Fast electronic strobe: 1~25Hz

### ● Other features and functions

Weight: 7.3 KG

## 4. Packaging and transportation

### 4.1 Disassemble packaging



Notice: After receiving the fixture, please unpack and check for any damage caused by transportation. If there is any damage caused by transportation, please do not use this fixture and contact the local technical personnel or manufacturer as soon as possible.


### 4.2 Equipment packaging

- 1). Disconnect the power supply before packaging the lighting fixtures to allow them to cool completely;
- 2). Flight cases can only be stacked in two layers and are not allowed to be reversed.

## 5. Installation Requirements Explanation

### 5.1 Clamp install



The lighting fixtures can be installed on the stage or on any direction of the truss, and the clamp can be quickly and easily locked onto the truss.

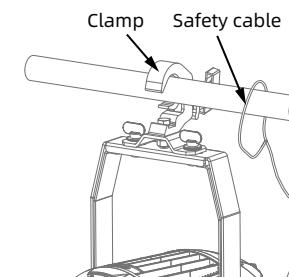

## Warning !

Fixture can be used to fix the equipment, and a safety rope must be connected to the safety hook. Note that it cannot be connected to the handle.


Quick lock and clamp install

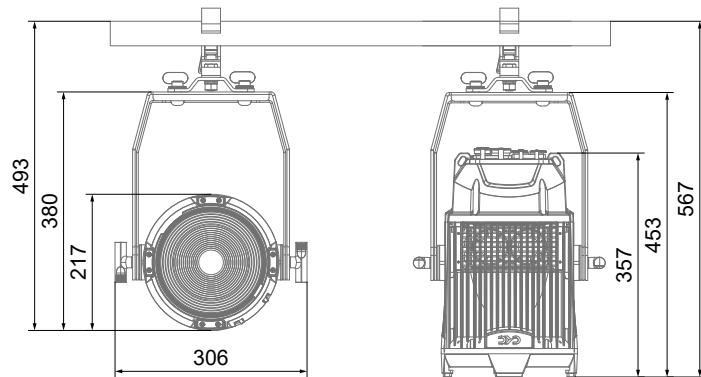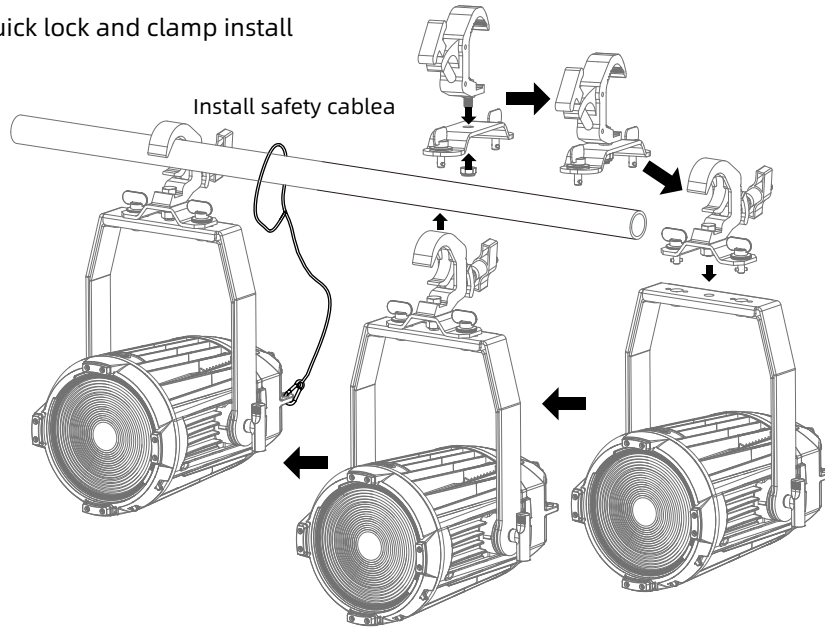

## 5.2 Equipment installation

- 1). Before installation, it is necessary to verify that the lamp hook and safety rope are not damaged, and that the installation object can withstand 6 times the total weight of the lamp and cable accessories;
- 2). Install the lamp hook on the handle and insert it horizontally into the handle mounting hole to lock it in place.


## 5.3 Hanging Installation Diagram

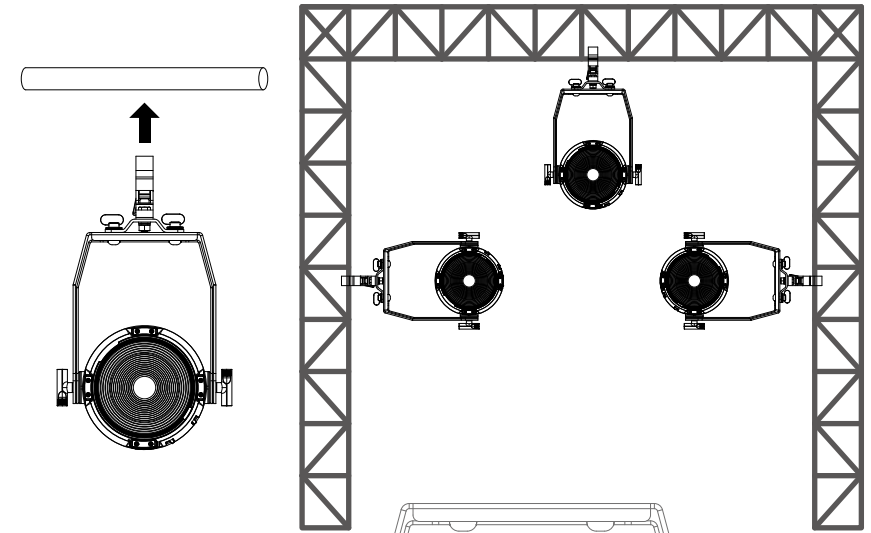

## 6. Power、Signal connect

### 6.1 Power and signal socket

1. Breathable valve
2. Power input
3. Power output
4. Dmx output
5. Dmx input

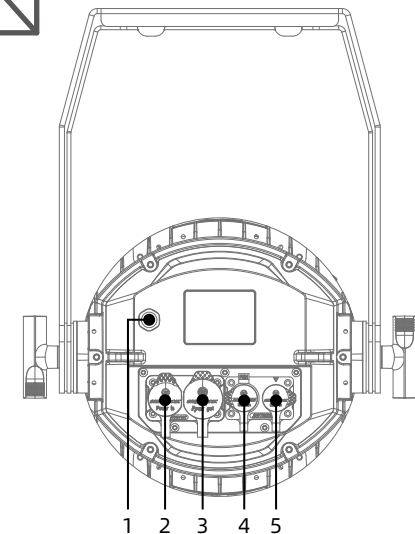

## 6.2 Power connect

### Connection method:

**L**(live wire) - brown wire


**E**(Ground wire) - yellow/green dual color line

**N**(Zero Line) - Blue Line

When connecting the power supply, please note that the voltage and frequency of the power supply must match the voltage and frequency marked on the light fixture. When multiple fixtures are used simultaneously, it is recommended to connect the power supply of each fixture separately, so that each fixture can be individually controlled for power on/off.



**Attention:** When connecting the power supply, the ground wire (yellow/green dual color wire) must be safely grounded and comply with all relevant electrical installation standards.

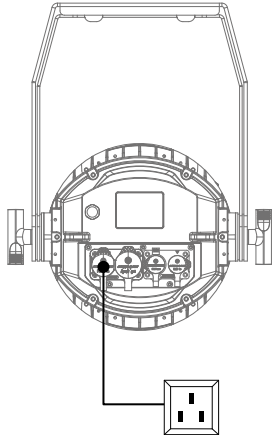


This product uses Powercon In/Out to connect power cords. Due to power limitations, a 2 square meter power cord can carry up to 8 products at 220V and 2 product at 110V.




### Warning !

- Do not connect too many fixtures or overload a single power cord;
- Do not use power cords with damaged insulation layers, and do not place power cords on other wires;
- When the fixture is not in use or cleaned, please unplug the power cord; Do not forcefully unplug or drag the power cord directly.


## 6.3 Signal connect

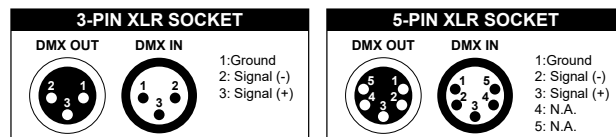

The lighting fixtures are equipped with standard DMX XLR input and output sockets. Please use DMX512 shielded twisted pair signal cables or Category 3/5 or above network twisted pair cables for connection. The typical connection distance for DMX signal lines is 150 meters. When transmitting signals over long distances, a DMX512 signal amplifier must be added.

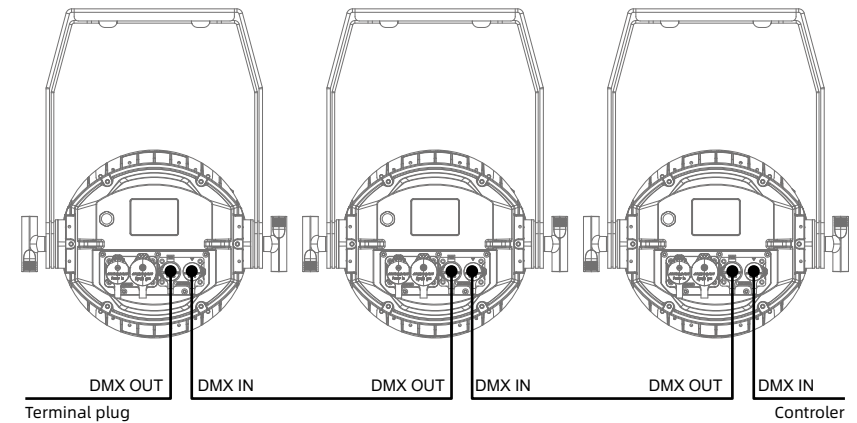


Connect a shielded twisted pair signal cable from the DMX output port of the controller to the DMX input port of the first device, and from the DMX output port of the first device to the DMX input port of the second device, and so on, until all the lamps are connected. Then install a terminal plug on the last 3 pin socket of each connected lamp output. (Weld a 4/1W, 120  $\Omega$  resistor between the 2 and 3 pins of a 3 or 5 core pin XLR plug).

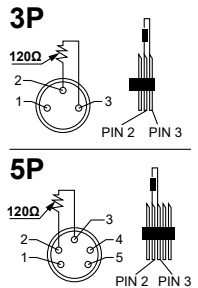

## 7. Control panel

### 7.1 Panel Introduction

- Adopting a OLED display screen;
- Press the MODE key to view or modify the lighting function settings, and press the UP, DOWN, LEFT, and RIGHT keys to select the function menu;
- Press the ENTER key to confirm your selected function menu, which will take you to the corresponding sub menu in the menu. Each menu item represents a specific function of the lighting fixture (as shown in the table below);
- Press the ENTER key to save your modifications or enter a submenu, and press the UP or DOWN key to modify values (increase or decrease values); Press the MODE key to return to the previous menu or exit.
- Press the MODE key to return to the previous menu or exit;
- When you enter the Touch Bar Mode mode, the bottom plus and minus keys and the slider adjust the values.

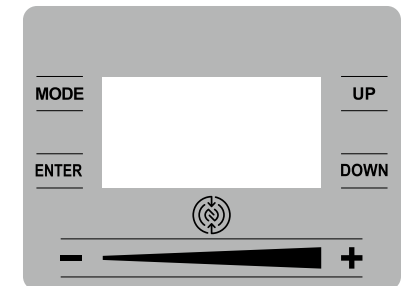

## 7.2. System menu

Note: The gray color block is the default setting value

|                                              |                       |                                                                            |                                 |
|----------------------------------------------|-----------------------|----------------------------------------------------------------------------|---------------------------------|
| Update<br>Wait..<br>CKC<br>SOFTWARE<br>V1.01 |                       |                                                                            |                                 |
| Receive                                      | XXCH XXXX<br>ADDR:001 |                                                                            |                                 |
| Touch Bar Mode                               | Disabled              | For use when running fixture in DMX mode                                   |                                 |
|                                              | Dimmer                | For use when running fixture in dimmer mode                                |                                 |
|                                              | Int CCT Grn           | For use when running fixture in CCT mode with touch bar control            |                                 |
|                                              | Int Color Sat         | For use when running fixture in color mode with touch bar control          |                                 |
|                                              | Manual Control        | For use when running fixture in manual control mode with touch bar control |                                 |
| DMX                                          | DMX Address           | 001 - 512                                                                  |                                 |
|                                              | DMX Mode              | 1CH Dimmer                                                                 |                                 |
|                                              |                       | 6CH Dimmer Color                                                           |                                 |
|                                              |                       | 11CH Standard                                                              |                                 |
|                                              |                       | 18CH Legacy Extended                                                       |                                 |
|                                              |                       | 19CH Extended                                                              |                                 |
|                                              |                       | 9CH CMY                                                                    |                                 |
|                                              |                       | 14CH Legacy CMY Extended                                                   |                                 |
|                                              | 15CH CMY Extended     |                                                                            |                                 |
|                                              | No DMX Status         | Hold Last                                                                  |                                 |
| Control                                      | Dimmer                | 000% - 100%                                                                |                                 |
|                                              | Manual Color          | Red                                                                        | 0- 255                          |
|                                              |                       | Green                                                                      | 0- 255                          |
|                                              |                       | Blue                                                                       | 0- 255                          |
|                                              |                       | Mint                                                                       | 0- 255                          |
|                                              |                       | Amber                                                                      | 0- 255                          |
|                                              |                       | CCT                                                                        | 2400K - 8500K (Default = 6000K) |
|                                              |                       | Green Shift                                                                | -100% ~ +100% (Default = 0)     |
|                                              | Virtual Color         | See Color Macros                                                           |                                 |
|                                              | Master                | On / Off                                                                   |                                 |
|                                              | Slave                 | On / Off                                                                   |                                 |
|                                              | Self Test             | All                                                                        |                                 |
|                                              |                       | Dimmer                                                                     |                                 |
|                                              |                       | Color                                                                      |                                 |
| Dim Modes                                    | Standard              |                                                                            |                                 |
|                                              | Stage                 |                                                                            |                                 |
|                                              | TV                    |                                                                            |                                 |
|                                              | Architectural         |                                                                            |                                 |

|                 |                            |                                                                                                |
|-----------------|----------------------------|------------------------------------------------------------------------------------------------|
| <b>Settings</b> | Theatre                    |                                                                                                |
|                 | Stage 2                    |                                                                                                |
|                 | Dim Speed                  | 0s - 10s (Default = 0.1s)                                                                      |
|                 | Dim to Warm                | On / Off                                                                                       |
|                 | Dim Curves                 | Linear                                                                                         |
|                 |                            | Square                                                                                         |
|                 |                            | Square Inverse                                                                                 |
|                 | CCT Mode                   | S-Curve                                                                                        |
|                 |                            | Constant Mode                                                                                  |
|                 | LED Refresh Rate           | Max Mode                                                                                       |
|                 |                            | 900Hz - 1500Hz, 2500Hz, 4000Hz, 5000Hz, 6000Hz, 10KHz, 15KHz, 20KHz, 25KHz (Default = 1200 Hz) |
|                 | LED Power Limit            | 50%                                                                                            |
|                 |                            | 60%                                                                                            |
|                 |                            | 70%                                                                                            |
|                 |                            | 80%                                                                                            |
|                 |                            | 90%                                                                                            |
| <b>Info</b>     | Fan Mode                   | 100%                                                                                           |
|                 |                            | Auto                                                                                           |
|                 |                            | High                                                                                           |
|                 |                            | Silent                                                                                         |
|                 |                            | Screen Delay 10s - 5min (Default = 1 min)                                                      |
|                 | Display                    | Screen Lock OFF/ON/ON1                                                                         |
|                 |                            | Rotate Display Yes / No / Auto                                                                 |
|                 |                            | Reset Defaults Yes / No                                                                        |
|                 | Time                       | Current Run Time                                                                               |
|                 |                            | Total Run Time                                                                                 |
|                 |                            | Last Run Time                                                                                  |
|                 | Temperature                | Current                                                                                        |
|                 |                            | Max Resettable                                                                                 |
| <b>Service</b>  | DMX Values                 | Red                                                                                            |
|                 |                            | Green                                                                                          |
|                 |                            | ...                                                                                            |
|                 |                            | Product IDs RDM UID xxxxxx...                                                                  |
|                 |                            | Error Logs Fixture Errors None                                                                 |
|                 | Software Version V1.01     |                                                                                                |
|                 | Calibration (Passcode:050) | Red 000 - 255                                                                                  |
|                 |                            | Green 000 - 255                                                                                |
|                 |                            | Blue 000 - 255                                                                                 |
|                 |                            | Mint 000 - 255                                                                                 |
|                 |                            | Amber 000 - 255                                                                                |
|                 | Reset Last Run             | Yes / No                                                                                       |
|                 | Reset Error Logs           | Yes / No                                                                                       |



## 7.3、Touch Bar Mode operation

| Disabled mode       |            |                   |              |         |
|---------------------|------------|-------------------|--------------|---------|
| Touch               | Function   | Display           | Each level   | Default |
| Disabled            | Exit Touch | DMX page          | /            | /       |
| Dimmer mode         |            |                   |              |         |
| Touch               | Function   | Display           | Each level   | Default |
| Dimmer              | Intensity  | Intensity: 0-100% | 1%           | 0%      |
| Int CCT Grn mode    |            |                   |              |         |
| Touch               | Function   | Display           | Each level   | Default |
| Int CCT Grn         | Intensity  | Intensity: 0-100% | 1%           | 0%      |
|                     | CCT        | CCT: 2400-8500K   | 100K         | 6000K   |
|                     | GM Point   | GRN-100%to +100%  | 1%           | 0%      |
| Int Color Sat mode  |            |                   |              |         |
| Touch               | Function   | Display           | Each level   | Default |
| Int Color Sat       | Intensity  | Intensity: 0-100% | 1%           | 0%      |
|                     | Color      | Color1-53         | Single Color | /       |
|                     | Saturation | Sat 0-100%        | 1%           | 100%    |
| Manual Control mode |            |                   |              |         |
| Touch               | Function   | Display           | Each level   | Default |
| Manual Control      | Intensity  | Intensity: 0-100% | 1%           | 0%      |
|                     | Strobe     | Strobe: 0-255     | 1            | 0       |
|                     | Red        | Red: 0-255        | 1            | 0       |
|                     | Green      | Green: 0-255      | 1            | 0       |
|                     | Blue       | Blue: 0-255       | 1            | 0       |
|                     | Mint       | Mint: 0-255       | 1            | 0       |
|                     | Amber      | Amber: 0-255      | 1            | 0       |

## 8. DMX channel table:

| 1CH | 6CH | 11CH | 18CH | 19CH | 9CH | 14CH | 15CH | Value Range | Function                                     |
|-----|-----|------|------|------|-----|------|------|-------------|----------------------------------------------|
| 1   | 1   | 1    | 1    | 1    | 1   | 1    | 1    | 0-255       | <b>Dimmer</b><br>Intensity 0 → 100%          |
|     | 2   | 2    | 2    | 2    | 2   | 2    | 2    | 0-255       | <b>Dimmer Fine</b><br>Fine Intensity Control |
|     |     |      |      |      |     |      |      |             | <b>Shutter/Strobe</b>                        |
|     |     |      |      |      |     |      |      | 0-31        | Shutter closed                               |
|     |     |      |      |      |     |      |      | 32-63       | No function (shutter open)                   |

|  |   |   |    |    |   |    |    |         |                                             |
|--|---|---|----|----|---|----|----|---------|---------------------------------------------|
|  | 3 | 3 | 3  | 3  | 3 | 3  | 3  | 64-95   | Strobe effect slow to fast                  |
|  |   |   |    |    |   |    |    | 96-127  | No function (shutter open)                  |
|  |   |   |    |    |   |    |    | 128-159 | Pulse-effect in sequences                   |
|  |   |   |    |    |   |    |    | 160-191 | No function (shutter open)                  |
|  |   |   |    |    |   |    |    | 192-223 | Random strobe effect slow to fast           |
|  |   |   |    |    |   |    |    | 224-255 | No function (shutter open)                  |
|  |   | 4 | 4  | 4  |   |    |    | 0-255   | <b>Red</b><br>0 → 100%                      |
|  |   |   | 5  | 5  |   |    |    | 0-255   | <b>Red Fine</b><br>Fine Adjustment          |
|  |   | 5 | 6  | 6  |   |    |    | 0-255   | <b>Green</b><br>0 → 100%                    |
|  |   |   | 7  | 7  |   |    |    | 0-255   | <b>Green Fine</b><br>Fine Adjustment        |
|  |   | 6 | 8  | 8  |   |    |    | 0-255   | <b>Blue</b><br>0 → 100%                     |
|  |   |   | 9  | 9  |   |    |    | 0-255   | <b>Blue Fine</b><br>Fine Adjustment         |
|  |   | 7 | 10 | 10 |   |    |    | 0-255   | <b>Mint</b><br>0 → 100%                     |
|  |   |   | 11 | 11 |   |    |    | 0-255   | <b>Mint Fine</b><br>Fine Adjustment         |
|  |   | 8 | 12 | 12 |   |    |    | 0-255   | <b>Amber</b><br>0 → 100%                    |
|  |   |   | 13 | 13 |   |    |    | 0-255   | <b>Amber Fine</b><br>Fine Adjustment        |
|  |   |   |    |    | 4 | 4  | 4  | 0-255   | <b>Cyan</b><br>0 → 100%                     |
|  |   |   |    |    |   | 5  | 5  | 0-255   | <b>Cyan Fine</b><br>Fine Adjustment         |
|  |   |   |    |    | 5 | 6  | 6  | 0-255   | <b>Magenta</b><br>0 → 100%                  |
|  |   |   |    |    |   | 7  | 7  | 0-255   | <b>Magenta Fine</b><br>Fine Adjustment      |
|  |   |   |    |    | 6 | 8  | 8  | 0-255   | <b>Yellow</b><br>0 → 100%                   |
|  |   |   |    |    |   | 9  | 9  | 0-255   | <b>Yellow Fine</b><br>Fine Adjustment       |
|  |   |   |    |    |   |    |    |         | <b>CCT Presets</b>                          |
|  | 4 | 9 | 14 |    | 7 | 10 |    | 0-23    | Open                                        |
|  |   |   |    |    |   |    |    | 24-85   | 2400K → 8500K (See Sheet)                   |
|  |   |   |    |    |   |    |    | 86-255  | 8500K                                       |
|  |   |   |    |    |   |    |    |         | <b>Variable CCT</b>                         |
|  |   |   |    | 14 |   |    | 10 | 0-23    | Open                                        |
|  |   |   |    |    |   |    |    | 24-255  | 2400K → 8500K                               |
|  |   |   |    | 15 |   |    | 11 | 0-255   | <b>Variable CCT Fine</b><br>Fine Adjustment |



|     |      |    |    |    |    |    |         |                                 |                             |
|-----|------|----|----|----|----|----|---------|---------------------------------|-----------------------------|
|     |      |    | 16 | 16 |    | 12 | 12      |                                 | Green Shift                 |
|     |      |    |    |    |    |    |         | 0                               | Idle                        |
|     |      |    |    |    |    |    |         | 1-127                           | Full Minus Green to Neutral |
|     |      |    |    |    |    |    |         | 128                             | Neutral White               |
|     |      |    |    |    |    |    |         | 129-255                         | Neutral to Full Plus Green  |
| 5   | 10   | 15 | 17 | 8  | 11 | 13 |         | Color                           |                             |
|     |      |    |    |    |    |    | 0       | Open                            |                             |
|     |      |    |    |    |    |    | 1-179   | Virtual Swatch Book (See Table) |                             |
|     |      |    |    |    |    |    |         | Color Scroll                    |                             |
|     |      |    |    |    |    |    | 180-201 | Clockwise Fast → Slow           |                             |
|     |      |    |    |    |    |    | 202-207 | Stop                            |                             |
|     |      |    |    |    |    |    | 208-229 | Counter-clockwise Slow → Fast   |                             |
|     |      |    |    |    |    |    | 230-234 | Open                            |                             |
|     |      |    |    |    |    |    |         | Random Slots                    |                             |
|     |      |    |    |    |    |    | 235-239 | Fast                            |                             |
|     |      |    |    |    |    |    | 240-244 | Medium                          |                             |
|     |      |    |    |    |    |    | 245-249 | Slow                            |                             |
|     |      |    |    |    |    |    |         | 250-255                         | Open                        |
|     |      |    | 17 | 18 | 13 | 14 |         | Dim Modes                       |                             |
|     |      |    |    |    |    |    | 0-20    | Standard                        |                             |
|     |      |    |    |    |    |    | 21-40   | Stage                           |                             |
|     |      |    |    |    |    |    | 41-60   | TV                              |                             |
|     |      |    |    |    |    |    | 61-80   | Architectural                   |                             |
|     |      |    |    |    |    |    | 81-100  | Theatre                         |                             |
|     |      |    |    |    |    |    | 101-120 | Stage 2                         |                             |
|     |      |    |    |    |    |    |         | Dimmer Delay Time               |                             |
|     |      |    |    |    |    |    | 121     | 0s                              |                             |
|     |      |    |    |    |    |    | 122     | 0.1s                            |                             |
|     |      |    |    |    |    |    | 123     | 0.2s                            |                             |
|     |      |    |    |    |    |    | 124     | 0.3s                            |                             |
|     |      |    |    |    |    |    | 125     | 0.4s                            |                             |
|     |      |    |    |    |    |    | 126     | 0.5s                            |                             |
|     |      |    |    |    |    |    | 127     | 0.6s                            |                             |
|     |      |    |    |    |    |    | 128     | 0.7s                            |                             |
|     |      |    |    |    |    |    | 129     | 0.8s                            |                             |
|     |      |    |    |    |    |    | 130     | 0.9s                            |                             |
|     |      |    |    |    |    |    | 131     | 1.0s                            |                             |
|     |      |    |    |    |    |    | 132     | 1.5s                            |                             |
|     |      |    |    |    |    |    | 133     | 2.0s                            |                             |
|     |      |    |    |    |    |    | 134     | 3.0s                            |                             |
|     |      |    |    |    |    |    | 135     | 4.0s                            |                             |
| 136 | 5.0s |    |    |    |    |    |         |                                 |                             |
| 137 | 6.0s |    |    |    |    |    |         |                                 |                             |
| 138 | 7.0s |    |    |    |    |    |         |                                 |                             |
| 139 | 8.0s |    |    |    |    |    |         |                                 |                             |

|  |  |  |  |  |  |  |         |                          |
|--|--|--|--|--|--|--|---------|--------------------------|
|  |  |  |  |  |  |  | 140     | 9.0s                     |
|  |  |  |  |  |  |  | 141     | 10s                      |
|  |  |  |  |  |  |  | 142-149 | Idle                     |
|  |  |  |  |  |  |  |         | <b>Dim to Warm</b>       |
|  |  |  |  |  |  |  | 150-154 | DTW On                   |
|  |  |  |  |  |  |  | 155-159 | DTW Off                  |
|  |  |  |  |  |  |  | 160-255 | Idle                     |
|  |  |  |  |  |  |  |         | <b>Control</b>           |
|  |  |  |  |  |  |  | 0-29    | Idle                     |
|  |  |  |  |  |  |  | 30-39   | Fan Mode Auto            |
|  |  |  |  |  |  |  | 40-49   | Fan Mode Silent          |
|  |  |  |  |  |  |  | 50-59   | Fan Mode High            |
|  |  |  |  |  |  |  | 60-99   | Idle                     |
|  |  |  |  |  |  |  |         | <b>Refresh Rate (Hz)</b> |
|  |  |  |  |  |  |  | 100     | 900                      |
|  |  |  |  |  |  |  | 101     | 910                      |
|  |  |  |  |  |  |  | 102     | 920                      |
|  |  |  |  |  |  |  | 103     | 930                      |
|  |  |  |  |  |  |  | 104     | 940                      |
|  |  |  |  |  |  |  | 105     | 950                      |
|  |  |  |  |  |  |  | 106     | 960                      |
|  |  |  |  |  |  |  | 107     | 970                      |
|  |  |  |  |  |  |  | 108     | 980                      |
|  |  |  |  |  |  |  | 109     | 990                      |
|  |  |  |  |  |  |  | 110     | 1000                     |
|  |  |  |  |  |  |  | 111     | 1010                     |
|  |  |  |  |  |  |  | 112     | 1020                     |
|  |  |  |  |  |  |  | 113     | 1030                     |
|  |  |  |  |  |  |  | 114     | 1040                     |
|  |  |  |  |  |  |  | 115     | 1050                     |
|  |  |  |  |  |  |  | 116     | 1060                     |
|  |  |  |  |  |  |  | 117     | 1070                     |
|  |  |  |  |  |  |  | 118     | 1080                     |
|  |  |  |  |  |  |  | 119     | 1090                     |
|  |  |  |  |  |  |  | 120     | 1100                     |
|  |  |  |  |  |  |  | 121     | 1110                     |
|  |  |  |  |  |  |  | 122     | 1120                     |
|  |  |  |  |  |  |  | 123     | 1130                     |
|  |  |  |  |  |  |  | 124     | 1140                     |
|  |  |  |  |  |  |  | 125     | 1150                     |
|  |  |  |  |  |  |  | 126     | 1160                     |
|  |  |  |  |  |  |  | 127     | 1170                     |
|  |  |  |  |  |  |  | 128     | 1180                     |
|  |  |  |  |  |  |  | 129     | 1190                     |
|  |  |  |  |  |  |  | 130     | 1200                     |


6 11 18 19 9 14 15

|         |                                |
|---------|--------------------------------|
| 131     | 1210                           |
| 132     | 1220                           |
| 133     | 1230                           |
| 134     | 1240                           |
| 135     | 1250                           |
| 136     | 1260                           |
| 137     | 1270                           |
| 138     | 1280                           |
| 139     | 1290                           |
| 140     | 1300                           |
| 141     | 1310                           |
| 142     | 1320                           |
| 143     | 1330                           |
| 144     | 1340                           |
| 145     | 1350                           |
| 146     | 1360                           |
| 147     | 1370                           |
| 148     | 1380                           |
| 149     | 1390                           |
| 150     | 1400                           |
| 151     | 1410                           |
| 152     | 1420                           |
| 153     | 1430                           |
| 154     | 1440                           |
| 155     | 1450                           |
| 156     | 1460                           |
| 157     | 1470                           |
| 158     | 1480                           |
| 159     | 1490                           |
| 160     | 1500                           |
| 161     | 2500                           |
| 162     | 4000                           |
| 163     | 5000                           |
| 164     | 6000                           |
| 165     | 10000                          |
| 166     | 15000                          |
| 167     | 20000                          |
| 168     | 25000                          |
| 169-200 | Idle                           |
|         | <b>Dimmer Curves</b>           |
| 201-210 | Dimmer Curve: Linear (Default) |
| 211-220 | Dimmer Curve: Square           |
| 221-230 | Dimmer Curve: Inverse Square   |
| 231-240 | Dimmer Curve: S-Curve          |
| 241-255 | Idle                           |

## Color macro

| Value | Filter Number | Name              | Value  | Filter Number | Name              |
|-------|---------------|-------------------|--------|---------------|-------------------|
| 1     | 7             | pale yellow       | 28     | 113           | magenta           |
| 2     | 103           | straw             | 29     | 46            | dark magenta      |
| 3     | 151           | gold tint         | 30     | 48            | rose purple       |
| 4     | 100           | spring yellow     | 31     | 126           | mauve             |
| 5     | 10            | medium yellow     | 32     | 49            | medium purple     |
| 6     | 101           | yellow            | 33     | 58            | lavender          |
| 7     | 104           | deep amber        | 34     | 199           | palace blue       |
| 8     | 15            | deep straw        | 35     | 119           | dark blue         |
| 9     | 179           | loving amber      | 36     | 132           | medium blue       |
| 10    | 21            | gold amber        | 37     | 120           | deep blue         |
| 11    | 105           | orange            | 38     | 165           | daylight blue     |
| 12    | 158           | deep orange       | 39     | 161           | slate blue        |
| 13    | 22            | dark amber        | 40     | 118           | light blue        |
| 14    | 778           | millenium gold    | 41     | 68            | sky blue          |
| 15    | 135           | deep golden amber | 42     | 143           | pale navy blue    |
| 16    | 24            | scarlet           | 43     | 131           | marine blue       |
| 17    | 106           | primary red       | 44     | 115           | peacock blue      |
| 18    | 26            | bright red        | 45     | 172           | lagoon blue       |
| 19    | 27            | medium red        | 46     | 116           | medium blue green |
| 20    | 19            | fire              | 47     | 90            | dark yellow green |
| 21    | 157           | pink              | 48     | 139           | primary green     |
| 22    | 36            | medium pink       | 49     | 122           | fern green        |
| 23    | 111           | dark pink         | 50     | 89            | moss green        |
| 24    | 128           | bright pink       | 51     | 124           | dark green        |
| 25    | 148           | bright rose       | 52     | 88            | lime green        |
| 26    | 332           | special rose pink | 53     | 138           | pale green        |
| 27    | 793           | vanity fair       | 54-179 |               | No function       |

## 9. Control circuit diagram

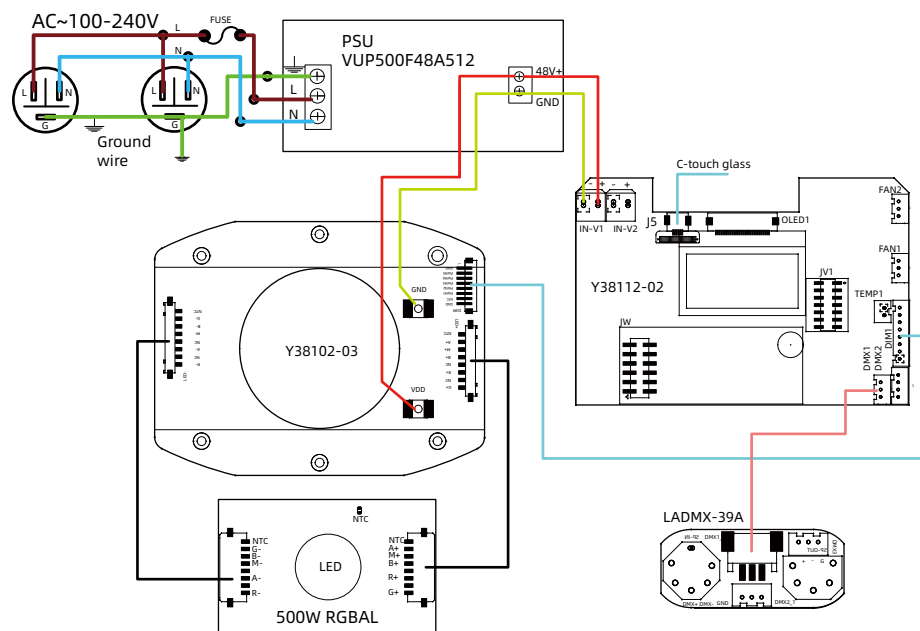

## 10. Regular maintenance

### 10.1 Cleaning and maintenance

Lighting fixtures require daily cleaning and maintenance, and their service life largely depends on the operating environment and standards. If you have any questions, please consult our technical engineers for advice. Maintenance and repair work not included in this book should be entrusted to our qualified technical engineers.



**Attention!** Damage caused by dust, e-liquid, or other reasons, as well as abnormal use, is not covered by the warranty.



### Warning !

Before opening any lid, disconnect the power supply. Cleaning optical components requires gentle wiping as the coating surface is prone to scratching. Do not use damaging liquids or hard objects, as they may damage the plastic or coating surface.

- When the lens is cracked or otherwise damaged, it should be replaced in a timely manner;

- When the brightness significantly decreases, the LED may have reached its expiration date and should be replaced in a timely manner;
- When the fixture cannot start, please check if the fixture power fuse is blown. If it is blown, a fuse of the same specification must be used for installation;
- The fixture is equipped with a temperature protection device. When the temperature is too high, the protection device will automatically reduce power.
- When this situation occurs, please check whether the fan is running normally, whether the fan and fan mesh are clogged with dust, identify the fault and repair it before starting the fixture. Please note that only qualified technicians are allowed to carry out maintenance work;
- To maintain smooth movement of the focusing lens, it is recommended to lubricate the guide rail of the focusing lens every three months. Excellent and high-temperature resistant lubricating grease should be used, and excessive grease should not be used as it can easily dirty adjacent components.

### 10.2 Fault analysis and handling

| Fault description                        | Analysis                                                                                                    | Processing method    |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------|----------------------|
| No action after power on                 | Check if the power switch is turned on                                                                      | Turn on              |
|                                          | Check if the fuse is blown                                                                                  | Replace              |
|                                          | Check if the output of PSU is normal                                                                        | Detecting voltage    |
|                                          | Check if poor contact in the internal circuit                                                               | Reconnect            |
| Uncontrolled lighting fixtures           | Check if the DMX signal cable is connected correctly (If there is no signal, the display screen will flash) | Reconnect or replace |
|                                          | Check if the address code is correct and if the DMX mode of the lighting fixture matches the settings       | Reconfirm            |
|                                          | The main control PCB is damaged                                                                             | Replace              |
| Not bright                               | LED aging or damage                                                                                         | Replace              |
|                                          | Power PCB malfunction                                                                                       | Check/ Replace       |
|                                          | Loose or poor contact of the circuit                                                                        | Reconnect            |
|                                          | PSU malfunction                                                                                             | Replace              |
| Automatically turn off or dim the lights | LED aging                                                                                                   | Replace              |
|                                          | The temperature control switch is damaged                                                                   | Replace              |

|                                                                                                                                                                                                                                |                                                   |                 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|-----------------|
| Weak light efficiency and uneven light spot                                                                                                                                                                                    | LED aging                                         | Replace         |
|                                                                                                                                                                                                                                | The optical mirror has accumulated dust or stains | Clean           |
|                                                                                                                                                                                                                                | The optical mirror is damaged                     | Replace         |
| Impure color                                                                                                                                                                                                                   | Weakening of light efficiency                     | Replace led PCB |
|                                                                                                                                                                                                                                | The color filter has accumulated dust or stains   | Clean           |
|                                                                                                                                                                                                                                | The color filter has been demolded or damaged     | Replace         |
|  <b>Attention!</b> The above analysis is for abnormal reference only. Non professionals are not allowed to disassemble and repair the machine |                                                   |                 |